

USER MANUAL





! CAUTION

Read all precautions and instructions in this manual before using this equipment.

Table of Contents

Important Safety Instructions2	
Instructions3	
Parts List4	
Exploded View5	
Measurement Guide6	
Assembly Instructions7	
Assembly8	
Maintenance Schedule11	
General Maintenance Information12	
Weight Training Tips13	
Specifications	

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

*Read all instructions before using the equipment. These instructions are written to ensure your safety and to protect the unit.

*Do not allow children on or near the equipment.

*Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.

*Wear proper exercise clothing and shoes for your workout---no loose clothing.

*Be careful when getting on or off the equipment.

*Do not overexert yourself or work to exhaustion.

*If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.

*Never operate the unit when it has been dropped or damaged.

*Never drop or insert anything into any opening in the equipment.

*Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.

*Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear.

*Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.

*Do not attempt to lift more weight than you can control safely.

*Do not use the equipment outdoors.

Personal Safety During Assembly

*Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.


*Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

Instructions

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your carton. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

Tools Required

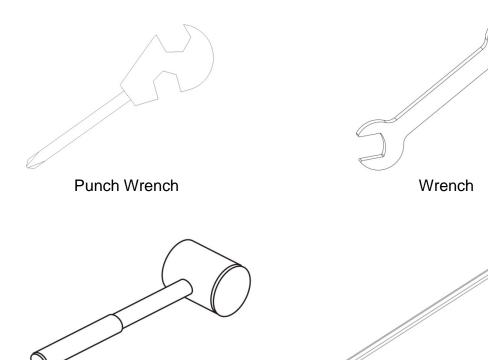

Rubber Mallet


Hex Key Wrench Set

Parts List


Note: some of these parts may come pre-installed.

ITEM NO.	DESCRIPTION	QTY		
1	Right Bottom Frame	1		
2	Left Bottom Frame	1		
3	Bottom Connection Frame	1		
4	Right Support Frame	1		
5	Left Support Frame	1		
6	Upper Support Frame	1		
7	Right Arm Frame	1		
8	Left Arm Frame	1		
9	Foam Rotating Frame	2		
10	Central Connection Frame	1		
11	11 Hand Frame			
12	Back Adjustment Frame	1		
13	Foam Fixing Bar	1		
14	Back Balancing Frame	1		
15	Barbell Plate Rack	2		
16	Barbell Plate Rack 2	2		
17	Barbell Plate Rack Fixing Plate	2		
18	Arc-shaped Connecting Plate	2		
19	Reinforcement Plate	2		
20	20 U shape back pad support			
21				
22				
23	Back Pad 1			
24	24 Seat Pad			
25	25 Decorative CapΦ11×Φ50×8			
26				
27	27 Flat Head Cap Screw M8X25			
28	28 Flat Head Cap Screw M10X25			
29	· · · · ·			
30				
31				
32				
33	Hex Bolt M12X35 28			
34	Hex Bolt M12X85 4			
35	Flat Washer Φ11ΧΦ20Χ2 14			
36	Spring Plate Ф12			
37	Flat Washer Φ13×Φ24×2 36			
38	Nut M10 1			
39	9 Nut M12			

Exploded View

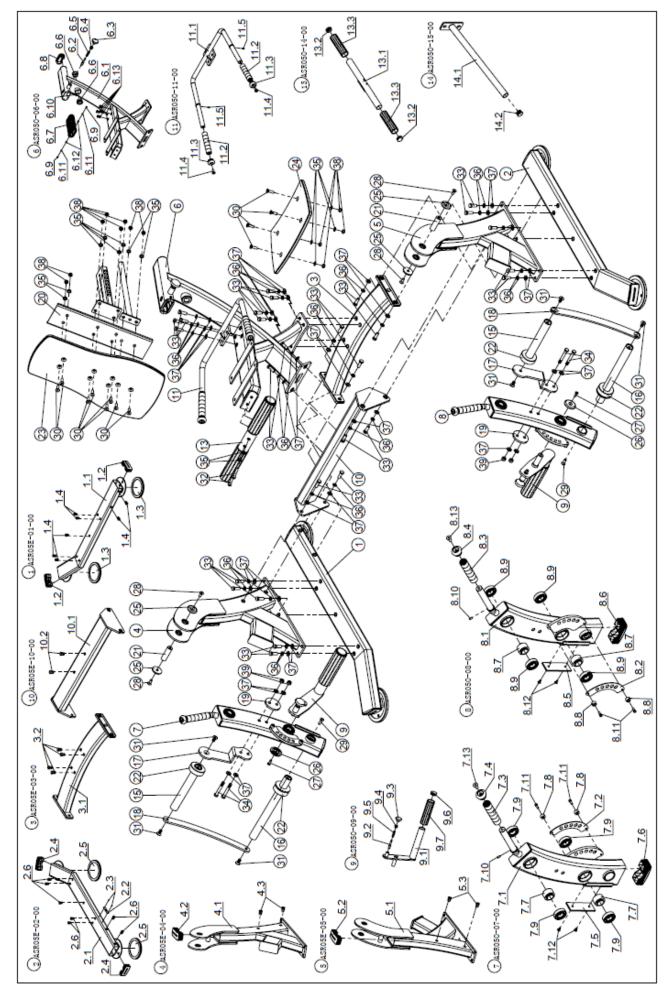

Measurement Guide

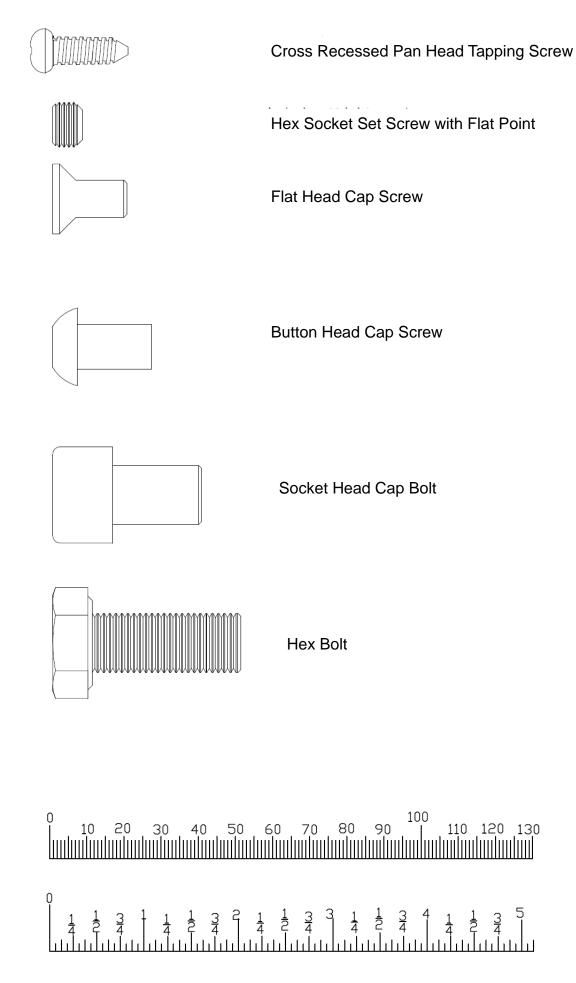

Assembly Instructions


Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assembly the equipment by professional installers. You may find it quicker, safer, and easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.

Note: As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

Assembly

Step 1


- Attach Right Bottom Frame (#1) and Left Bottom Frame (#2) to Bottom Connection Frame (#3) using: Four Hex Bolt M12X35 (#33)
 Four Flat Washer Φ13×Φ24×2 (#37) Four Spring Plate Φ12 (#36)
- 2. Attach Right Support Frame (#4) and Left Support Frame (#5) to Right Bottom Frame (#1) and Left Bottom Frame (#2), and connected by Central Connection Frame (#10) using: Fourteen Hex Bolt M12X35 (#33)
 Fourteen Flat Washer Φ13×Φ24×2 (#37) Fourteen Spring Plate Φ12 (#36)
- 3. Attach Upper Support Frame(#6) to Bottom Connection Frame(#3) and Central Connection Frame (#10) using:
 Six Hex Bolt M12X35 (#33)
 Six Flat Washer Φ13×Φ24×2 (#37)
 Six Spring Plate Φ12 (#36)

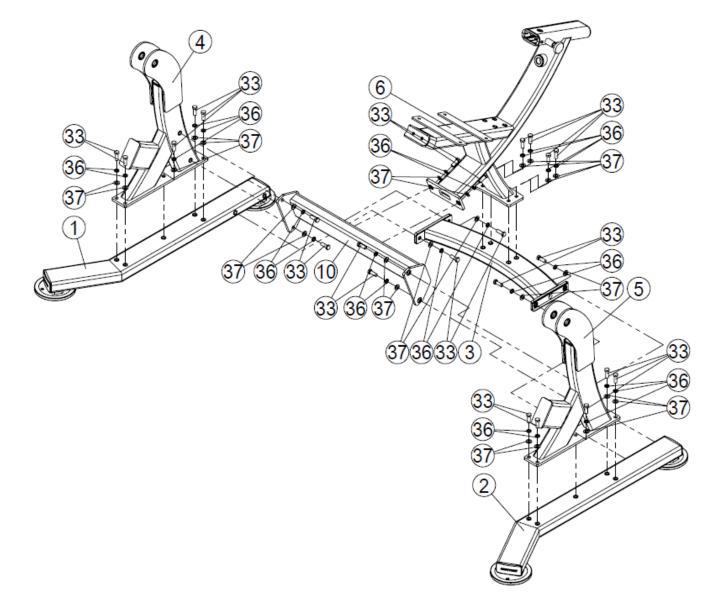

Step 2

- Attach Right Arm Frame (#7) and Left Arm Frame (#8) to Right Support Frame (#4) and Left Support Frame (#5) using: Two Bearing Axle (#21) Four Decorative CapΦ11×Φ50×8 (#25) Four Flat Head Cap Screw M10X25 (#28)
- Attach Foam Rotating Frame (#9) to Right Arm Frame (#7) and Left Arm Frame(#8) using: Two End Cap Φ60 (#26)
 Two Flat Head Cap Screw M8X25 (#27)
- 3. Attach Hand Frame (#11), Back Adjustment Frame (#12), Foam Fixing Bar(#13) and Back Balancing Frame (#14) to Upper Support Frame (#6) using: Four Hex Bolt M12X35 (#33)
 Four Flat Washer Φ13×Φ24×2 (#37)
 Four Spring Plate Φ12 (#36)
 Two Flat Washer Φ11XΦ20X2(#35)
 Two Flat Head Cap Screw M10X75 (#32)


PLEASE MAKE SURE THE BOLTS ARE FASTENED IN GOOD POSITION

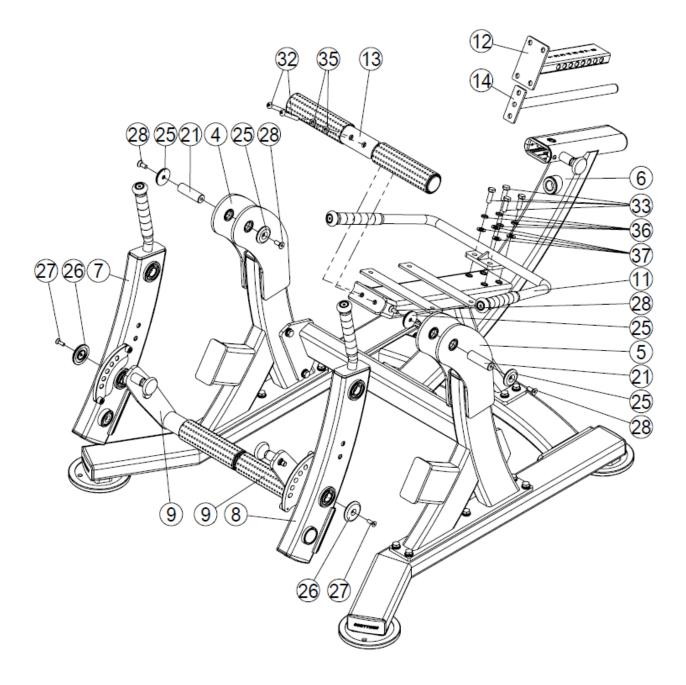

Step 3

- Attach Barbell Plate Rack (#15), Barbell Plate Rack 2(#16), Barbell Plate Rack Fixing Plate(#17), Arc-shaped Connecting Plate(#18) and Reinforcement Plate(#19) to Right Arm Frame (#7) and Left Arm Frame(#8) using: Six Flat Head Cap Screw M12X25 (#31)
 Four Hex Bolt M12X85 (#34)
 Eight Flat Washer Φ13×Φ24×2 (#37) Four Nut M12 (#39)
- Attach Back Pad (#23) and U shape back pad support (#20) to Back Adjustment Frame (#12) and Back Balancing Frame (#14) using: Eight Flat Head Cap Screw M10X35 (#30)
 Eight Flat Washer Φ11XΦ20X2(#35)
 Eight Nut M10 (#38)
- Attach Seat Pad (#24) to Upper Support Frame (#6) using: Four Flat Head Cap Screw M10X35 (#30)
 Four Flat Washer Φ11XΦ20X2(#35) Four Nut M10 (#38)

PLEASE MAKE SURE THE BOLTS ARE FASTENED IN GOOD POSITION

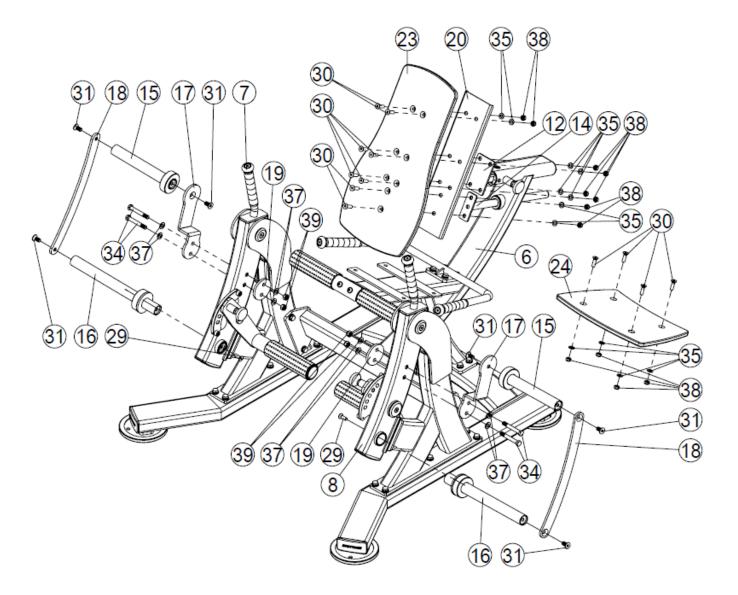

Maintenance Schedule

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTEMANCE	LATEST DATE ENTRY
Inspect: Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY	
Clean: Upholstery	DAILY	WEEKLY	
Inspect: Cables or Belts and their tension	DAILY	WEEKLY	
Inspect: Accessory Bars, and Handles	WEEKLY	3 MONTHS	
Inspect: All Decals	WEEKLY	3 MONTHS	
Inspect: All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS	
Inspect:Anti-skid Surface	WEEKLY	3 MONTHS	
Clean&Lubricate: Guide rods with a Teflon(PTFE) based lubricant(Superlube)	MONTHS	3 MONTHS	
Lubricate: Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHS	3 MONTHS	
Clean and Wax: All Glossy Finishes	6 MONTHS	YEARLY	
Repack with Grease: Linear Bearings	6 MONTHS	YEARLY	
Replace: Cables, Belts and Connecting Parts	YEARLY	3 YEARS	

General Maintenance Information

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

*Check all pieces for signs of visible wear or damage.

*Check springs in snap hooks and pull-pins for proper tension and alignment.

*If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

*To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.

*Periodically take the time to use a mild soap or approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.

*Replace ripped or worn upholstery immediately.

*Keep sharp or pointed objects clear of all upholstery.

Decals:

*Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

*Inspect all nuts and bolts for any loosening and tighten if needed.

*Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

*These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

*We use only high quality belt, and mil-spec cables.

*Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.

*While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.

*Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tensions:

*Referring to the Owner's Manual, when belts or cables are used check all bolts attachment to be sure they are properly attached.

*Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

*Wipe down adjusting tubes with a dust free rag before applying lubricant.

*Lubricate seat sleeves and Guide Rods with silicon or Teflon based lubricant spray.

Linear Bearings:

*Referring to the owner's manual carefully disassembly the bearing from its housing and place a finger full of light grease (lithium, super lube, etc) into the inside of the bearing. Use your finger, press the grease into the ball-bearings and their tracks. Repeat until the ball-bearing tracks are full

of grease. Insert the shaft back into the bearing and wipe off excess grease.

Weight Training Tips

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.

Specifications

Class: S

Maximum Load of Trainer: 150Kgs/330Lbs



www.bodytone.eu