

BODYTONE

USER MANUAL



SOLID ROCK

SR08E

! CAUTION

Read all precautions and instructions in this manual before using this equipment.

Table of Contents

Important Safety Instructions-----	2
Instructions-----	3
Parts List-----	4
Exploded View-----	5
Measurement Guide-----	6
Assembly Instructions-----	7
Assembly-----	8
Maintenance Schedule-----	20
General Maintenance Information-----	21
Weight Training Tips-----	22
Specifications-----	22

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

- *Read all instructions before using the equipment. These instructions are written to ensure your safety and to protect the unit.
- *Do not allow children on or near the equipment.
- *Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
- *Wear proper exercise clothing and shoes for your workout---no loose clothing.
- *Be careful when getting on or off the equipment.
- *Do not overexert yourself or work to exhaustion.
- *If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- *Never operate the unit when it has been dropped or damaged.
- *Never drop or insert anything into any opening in the equipment.
- *Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.
- *Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear.
- *Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
- *Do not attempt to lift more weight than you can control safely.
- *Do not use the equipment outdoors.

Personal Safety During Assembly


- *Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.
- *Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

Instructions

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your carton. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.


Tools Required

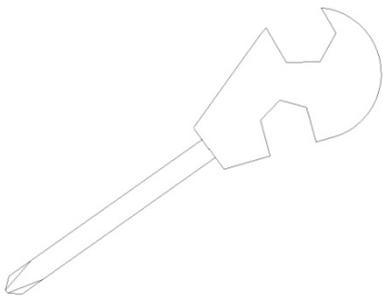


Punch Wrench



Wrench

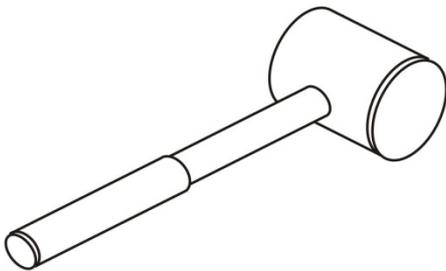

Rubber Mallet

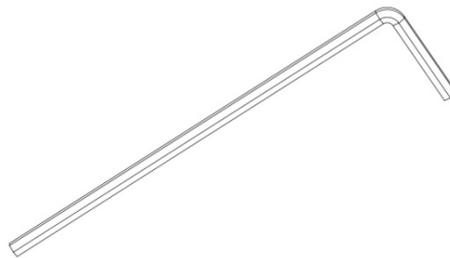


Hex Key Wrench Set

Parts List


Note: some of these parts may come pre-installed.

ITEM NO.	DESCRIPTION	QTY
1	Bottom Connection Frame	1
2	Right Bottom Frame	1
3	Left Bottom Frame	1
4	Right Upright Frame	1
5	Left Upright Frame	1
6	Right Arm Frame	1
7	Left Arm Frame	1
8	Central Connection Frame	1
9	Pedal Fixing Frame	1
10	Elbow Pad Support	1
11	Foot Pad Support	1
12	Right Foam Frame	1
13	Left Foam Frame	1
14	Right Hand Frame	1
15	Left Hand Frame	1
16	Longer Barbell Plate Rack	2
17	Elbow Pad Board	1
18	Leg Pad	1
19	Elbow Pad	1
20	Knee Foam	2
21	Bearing Rotating Shaft A	1
22	Bearing Rotating Shaft B	2
23	Small End Cap	2
24	Decorative Cap $\Phi 11 \times \Phi 50 \times 8$	8
25	Foam Inner Cap	2
26	Foam Outer Cap	2
27	Flat Head Cap Screw M10X25	8
28	Flat Head Cap Screw M8X30	2
29	Flat Head Cap Screw M8X20	4
30	Hex Bolt M12X30	26
31	Flat Washer $\Phi 13 \times \Phi 24 \times 2$	26
32	Spring Plate $\Phi 12$	26
33	Hex Bolt M10X140	2
34	Hex Bolt M10X30	4
35	Nut M10	2
36	Flat Washer $\Phi 11 \times \Phi 20 \times 2$	8
37	Spring Plate $\Phi 10$	4

Exploded View

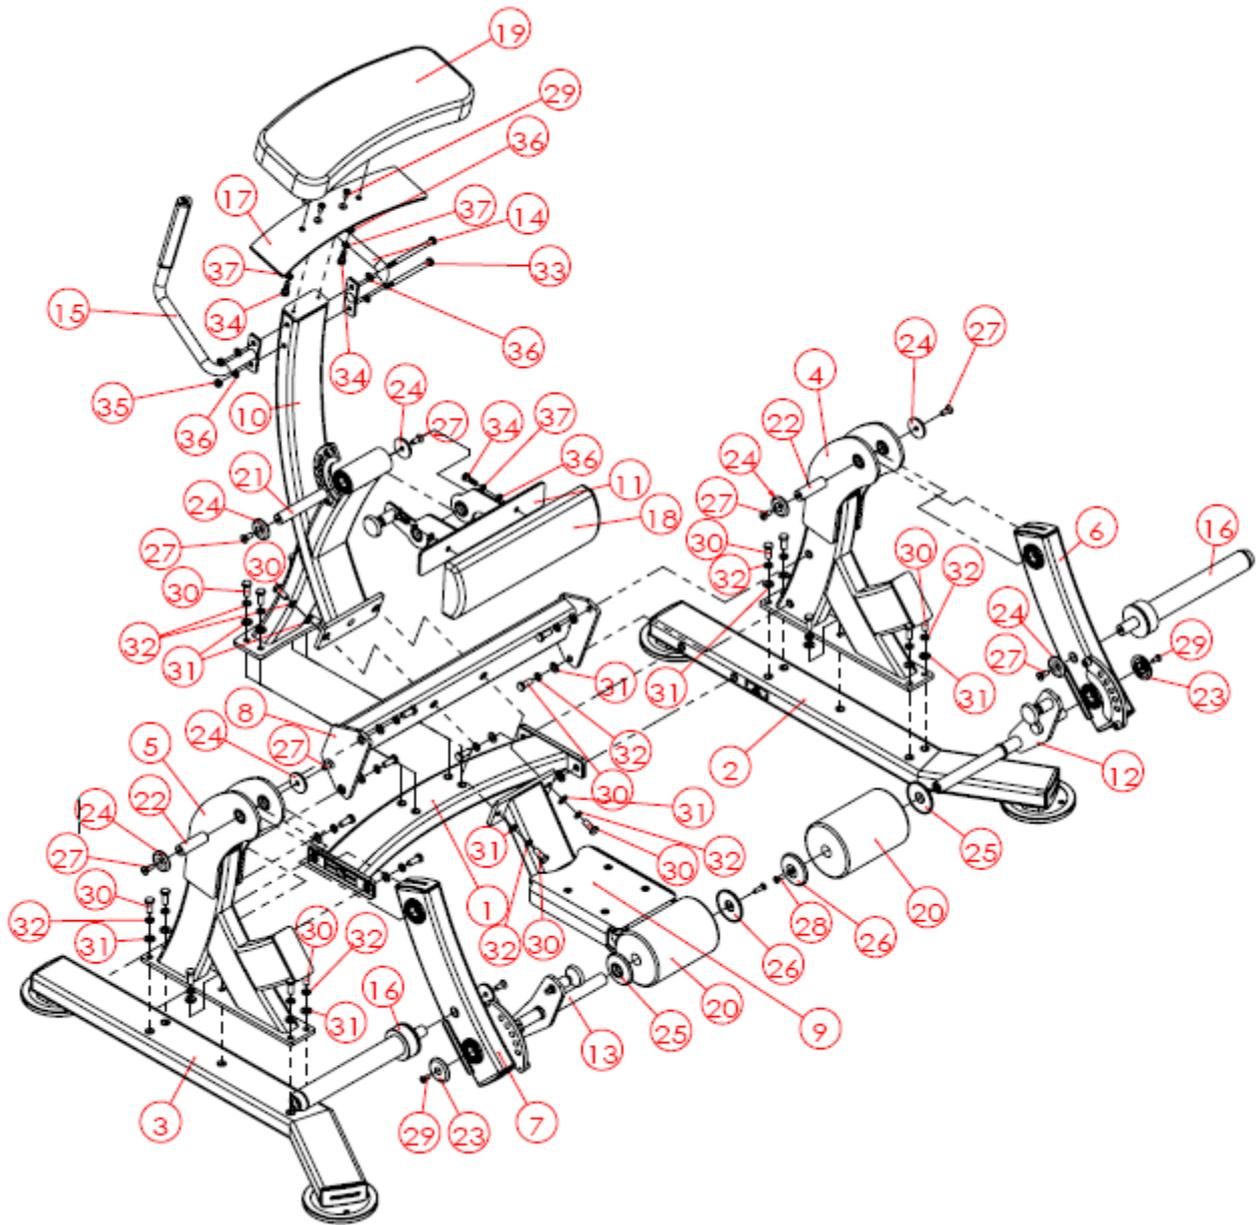


Measurement Guide

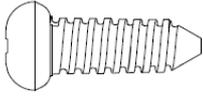


Cross Recessed Pan Head Tapping Screw




Hex Socket Set Screw with Flat Point

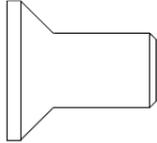


Flat Head Cap Screw

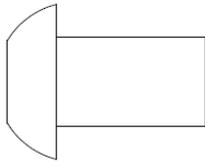


Button Head Cap Screw

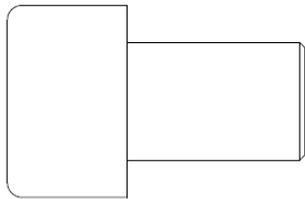

Socket Head Cap Bolt

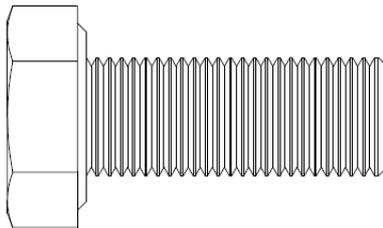

Hex Bolt

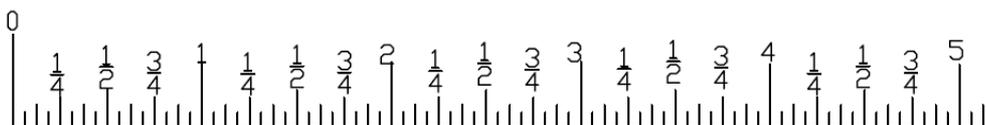

Assembly Instructions

Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, and easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.

Note: As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.


Assembly

Step 1

Attach Right Bottom Frame (#2) and Left Bottom Frame (#3) to Bottom Connection Frame (#1) using:

Four Hex Bolt M12X30 (#30)
Four Spring Plate $\Phi 12$ (#32)

Four Flat Washer $\Phi 13 \times \Phi 24 \times 2$ (#31)

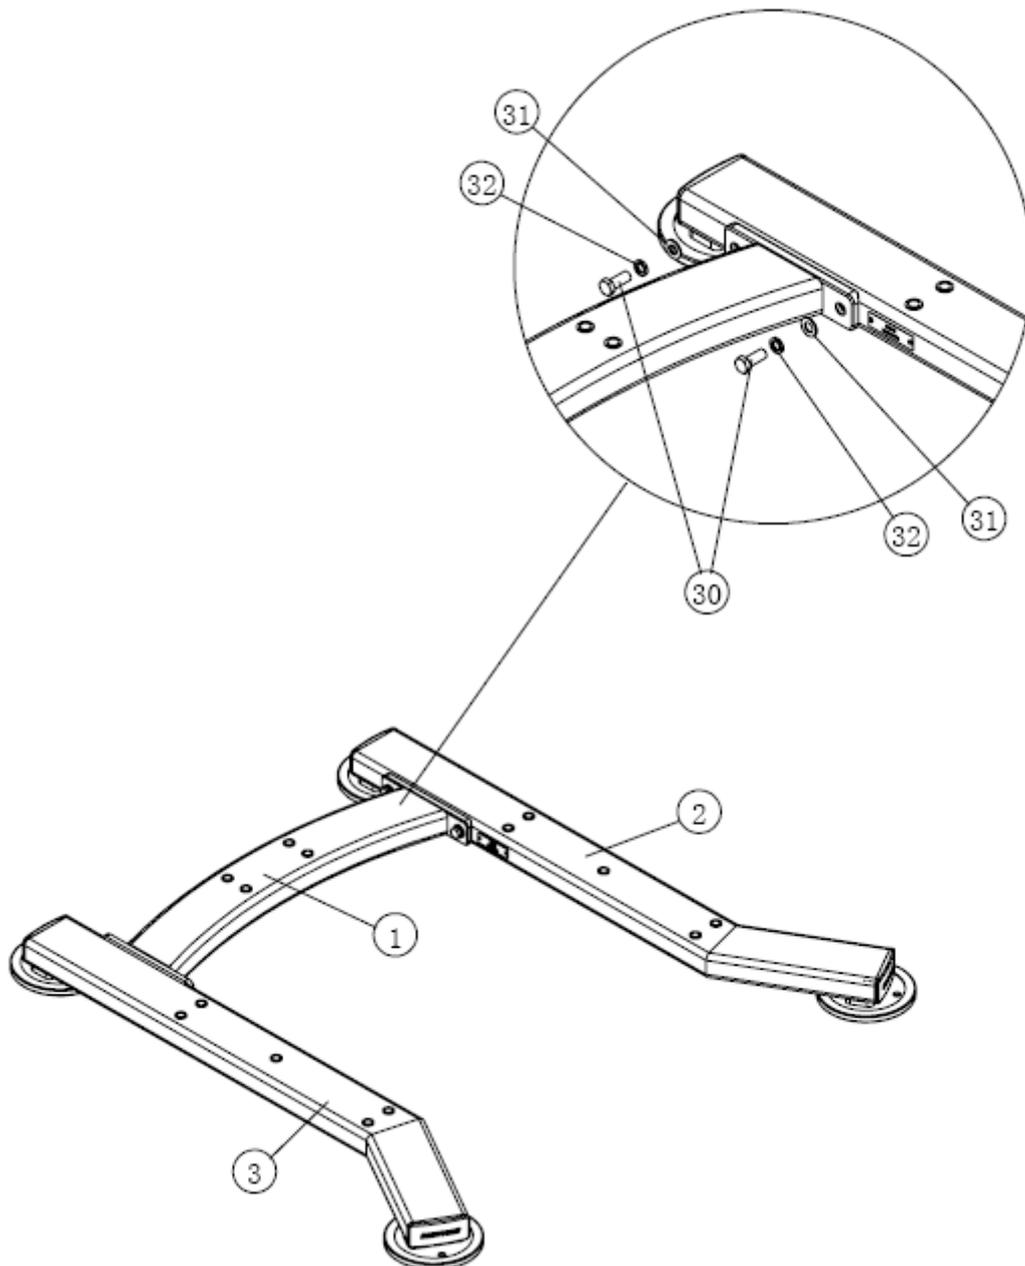

Step 2

1. Attach Right Upright Frame (#4) to Right Bottom Frame (#2) using:


Five Hex Bolt M12X30 (#30)
Five Spring Plate Φ 12 (#32)

Five Flat Washer Φ 13 \times Φ 24 \times 2 (#31)

2. Attach Left Upright Frame (#5) to Left Bottom Frame (#3) using:

Five Hex Bolt M12X30 (#30)
Five Spring Plate Φ 12 (#32)

Five Flat Washer Φ 13 \times Φ 24 \times 2 (#31)

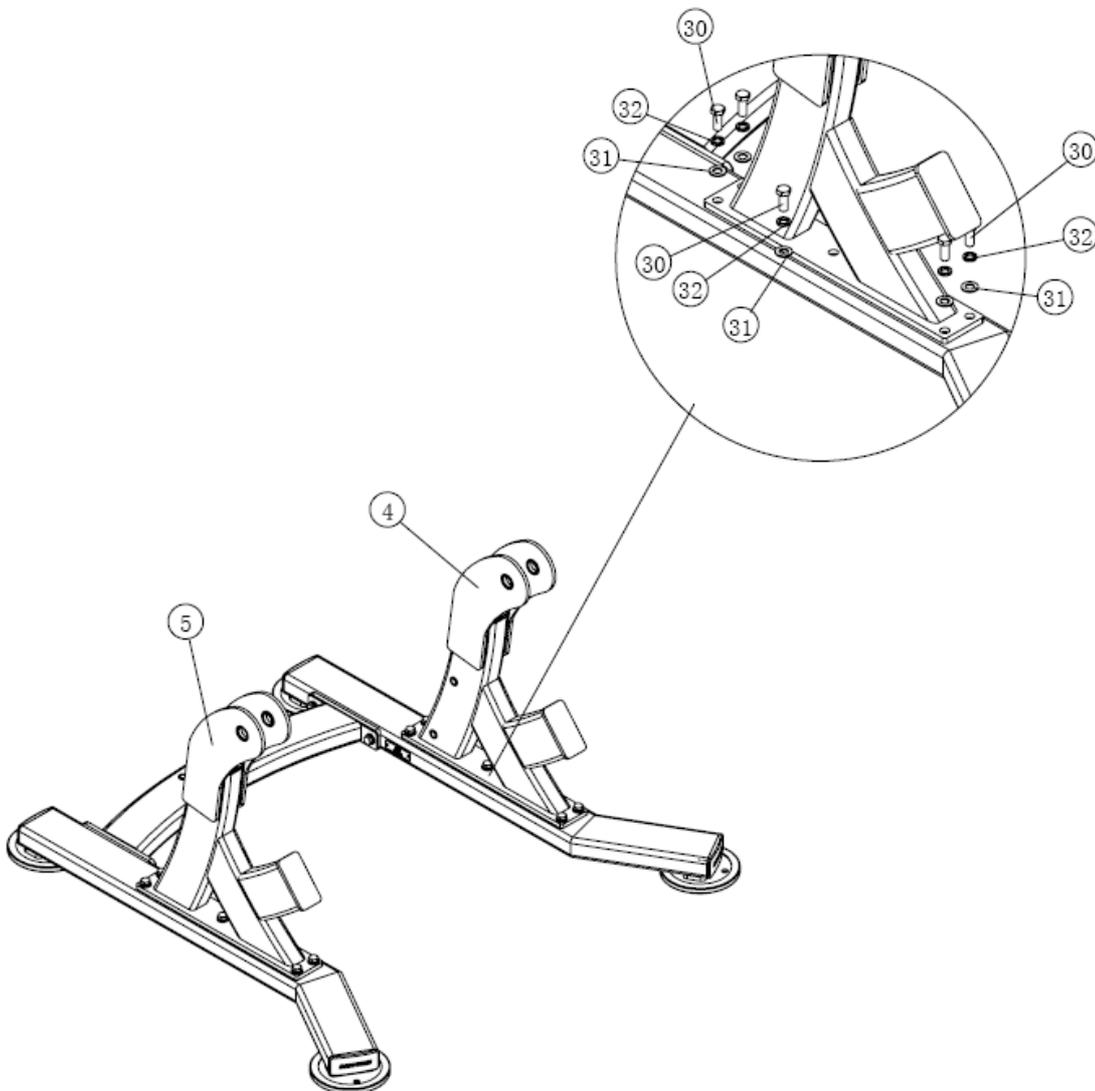


Step 3

Attach Right Bottom Frame (#2) and Left Bottom Frame (#3) to Central Connection Frame (#8) using:

Four Hex Bolt M12X30 (#30)

Four Flat Washer $\Phi 13 \times \Phi 24 \times 2$ (#31)

Four Spring Plate $\Phi 12$ (#32)

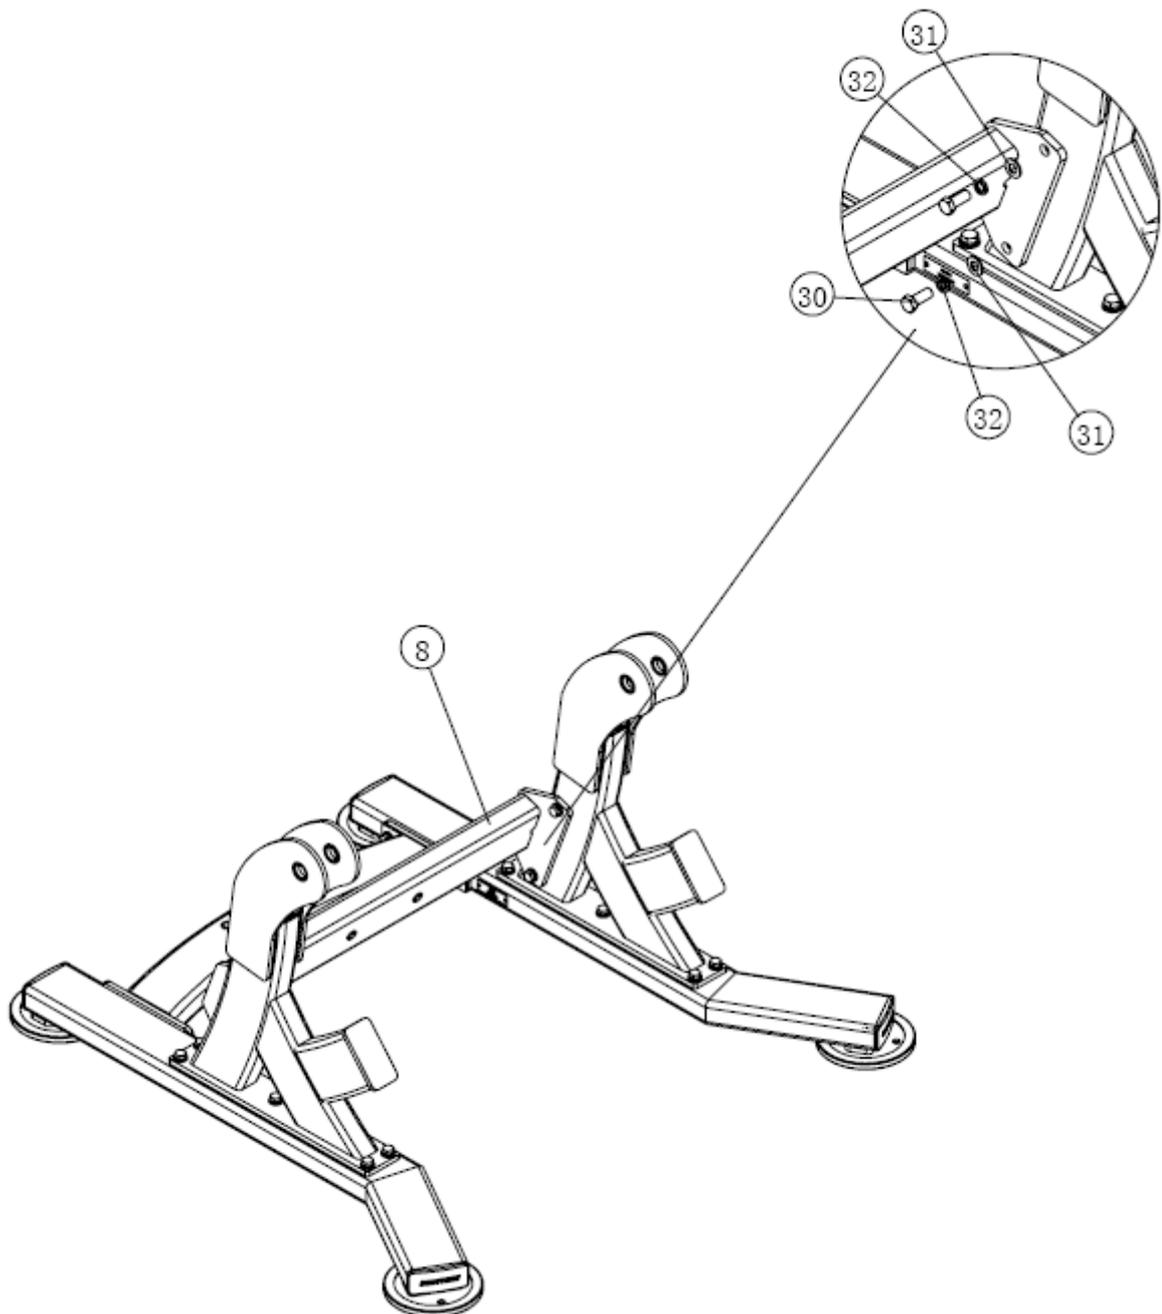


Step 4

Attach Pedal Fixing Frame (#9) to Central Connection Frame (#8) using:

Two Hex Bolt M12X30 (#30)

Two Flat Washer $\Phi 13 \times \Phi 24 \times 2$ (#31)

Two Spring Plate $\Phi 12$ (#32)

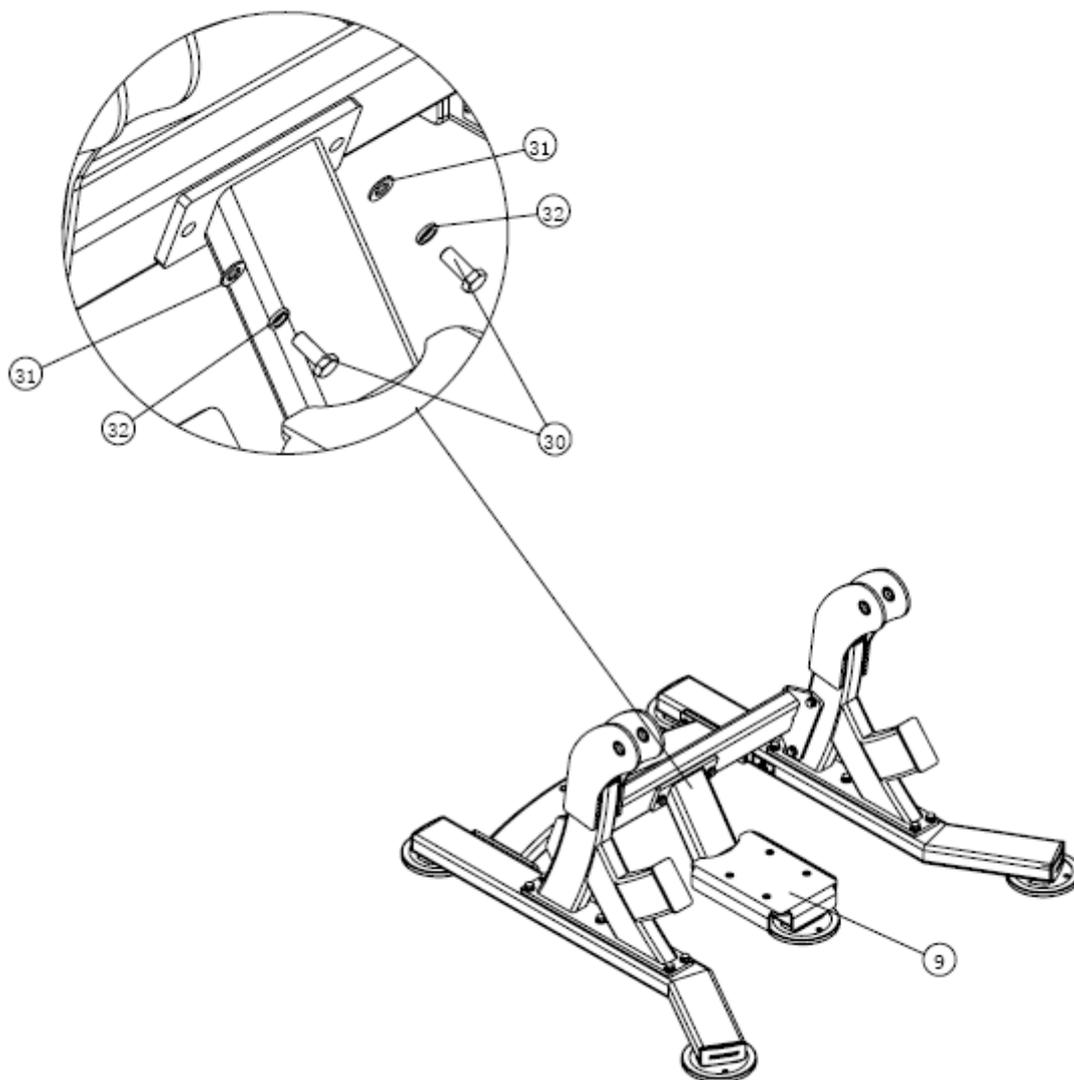


Step 5

Attach Elbow Pad Support (#10) to Central Connection Frame (#8) and Right Bottom Frame (#2) using:


Six Hex Bolt M12X30 (#30)
Six Spring Plate Φ 12 (#32)

Six Flat Washer Φ 13 \times Φ 24 \times 2 (#31)

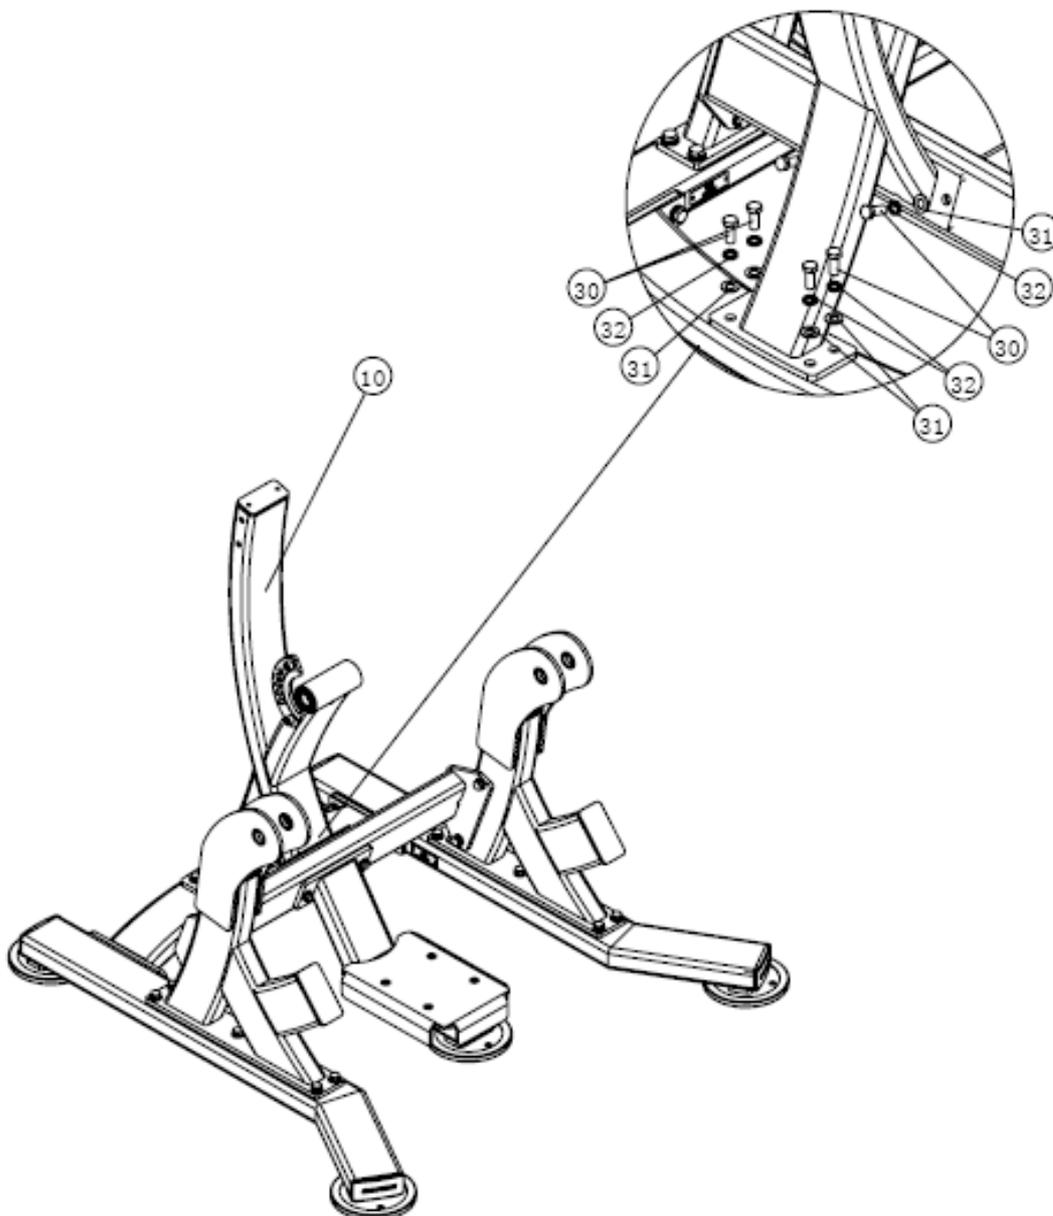

Step 6

1. Attach Elbow Pad Board (#17) to Elbow Pad Support (#10). Using Two Flat Head Cap Screw M8X20 (#29)
2. Attach Foot Pad Support (#11), Bearing Rotating Shaft A (#21) and 2×Decorative CapΦ11×Φ50×8 (#24) to Elbow Pad Support (#10) using Two Flat Head Cap Screw M8X20 (#29)

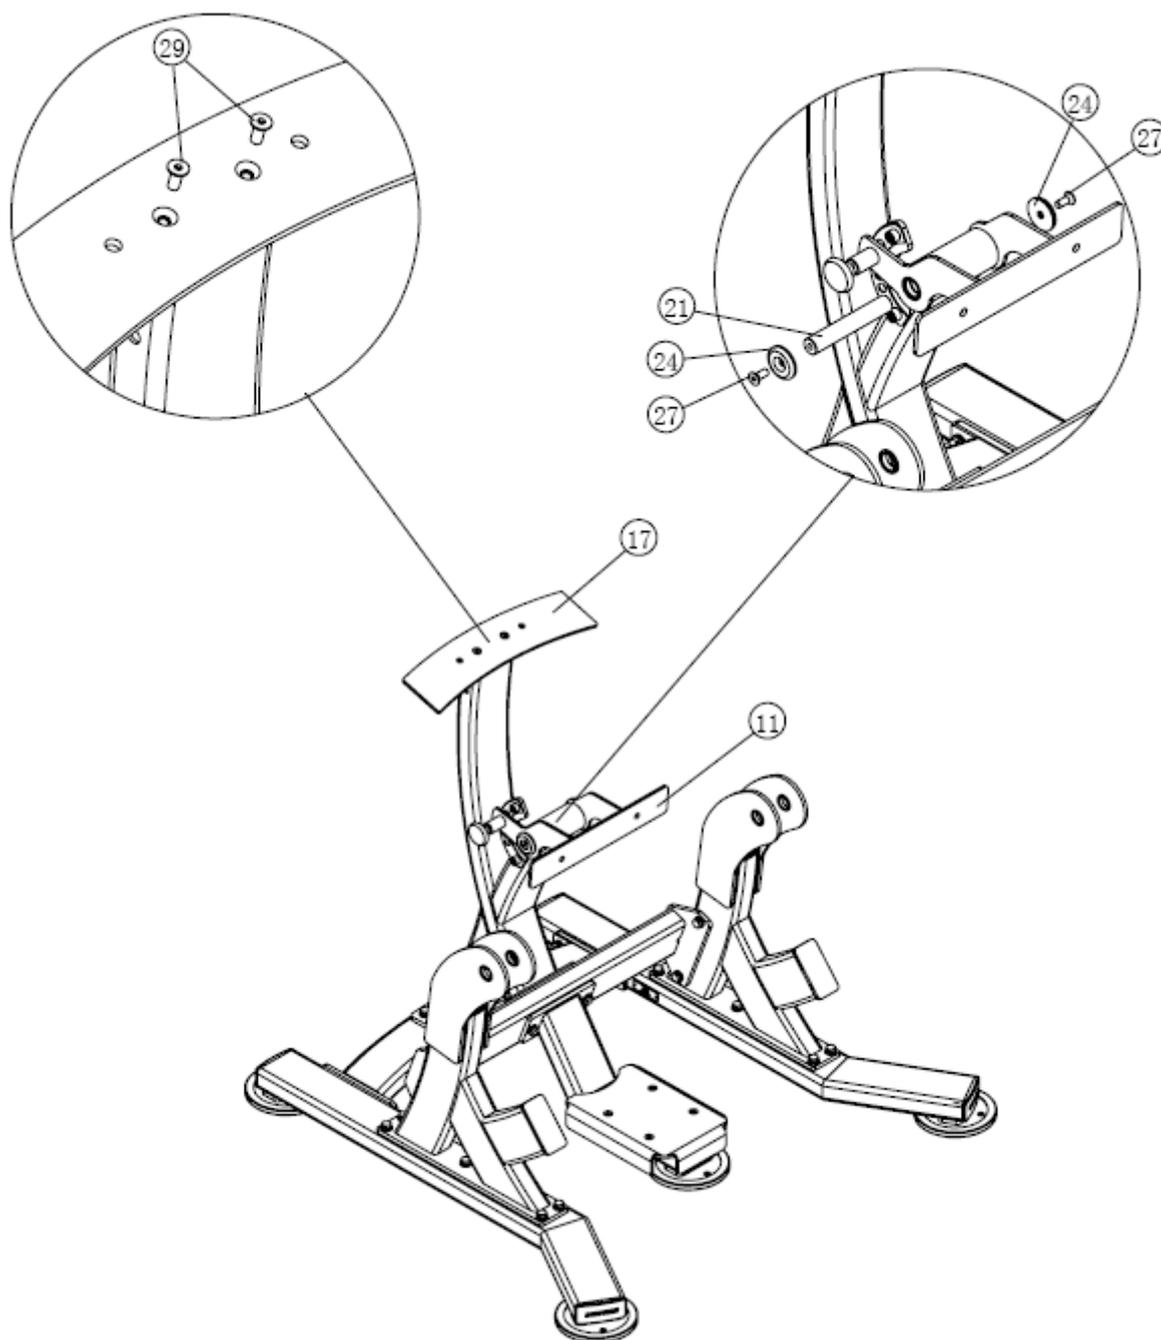

Step 7

1. Attach Leg Pad (#18) to Foot Pad Support (#11)


Two Hex Bolt M10X30 (#34)
Two Spring Plate Φ 10 (#37)

Two Flat Washer Φ 11X Φ 20X2 (#36)

2. Attach Elbow Pad (#19) to Elbow Pad Board (#17)

Two Hex Bolt M10X30 (#34)
Two Spring Plate Φ 10 (#37)

Two Flat Washer Φ 11X Φ 20X2 (#36)

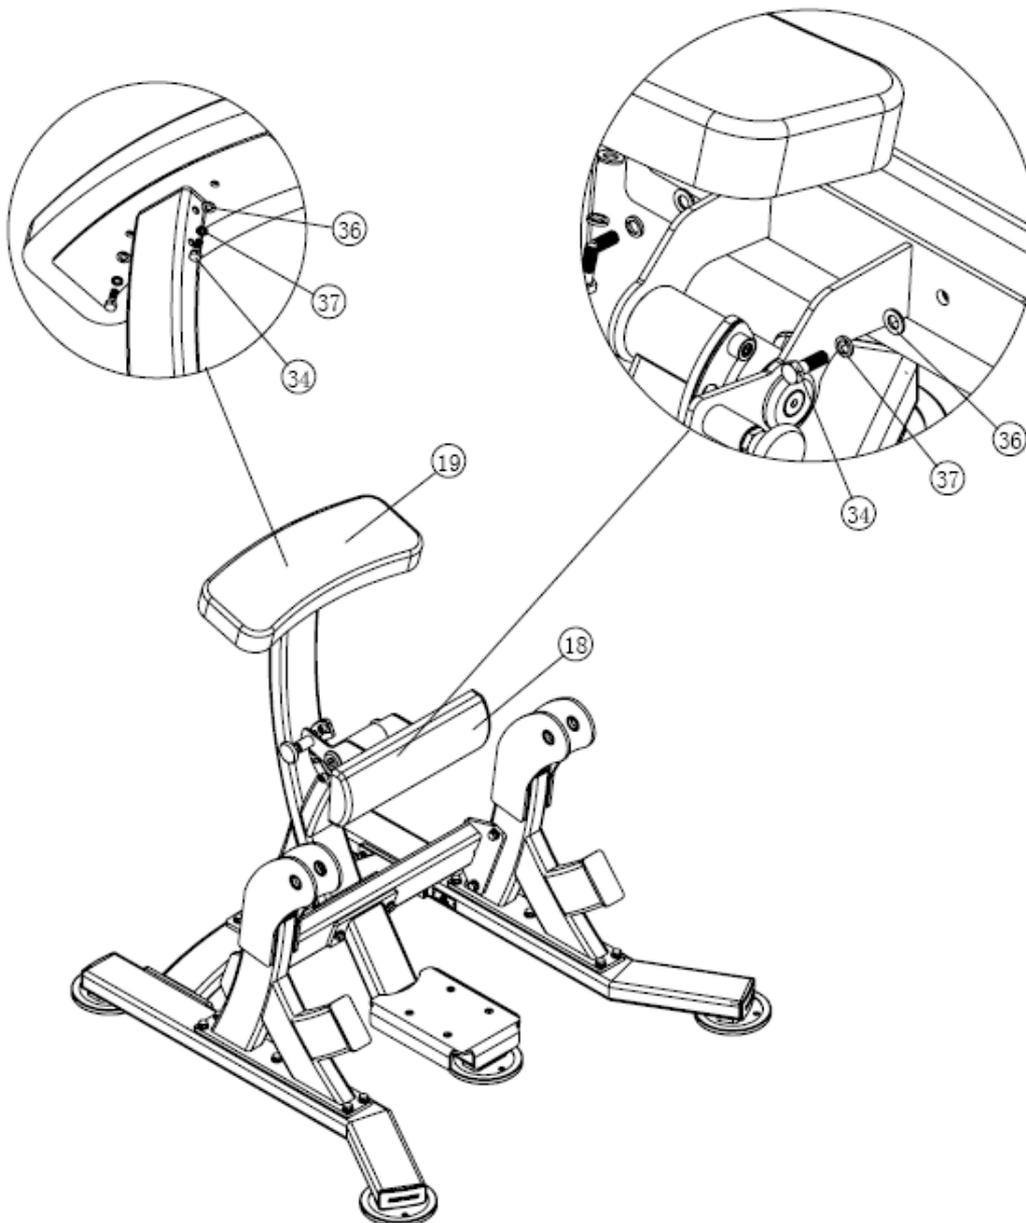


PLEASE MAKE SURE THE BOLTS ARE FASTENED IN GOOD POSITION

Step 8

1. Attach Right Hand Frame (#14) and Right Hand Frame(#15) to Elbow Pad Support (#10) using:


Two Hex Bolt M10X140 (#33)
Two Nut M10 (#35)

Four Flat Washer $\Phi 11 \times \Phi 20 \times 2$ (#36)

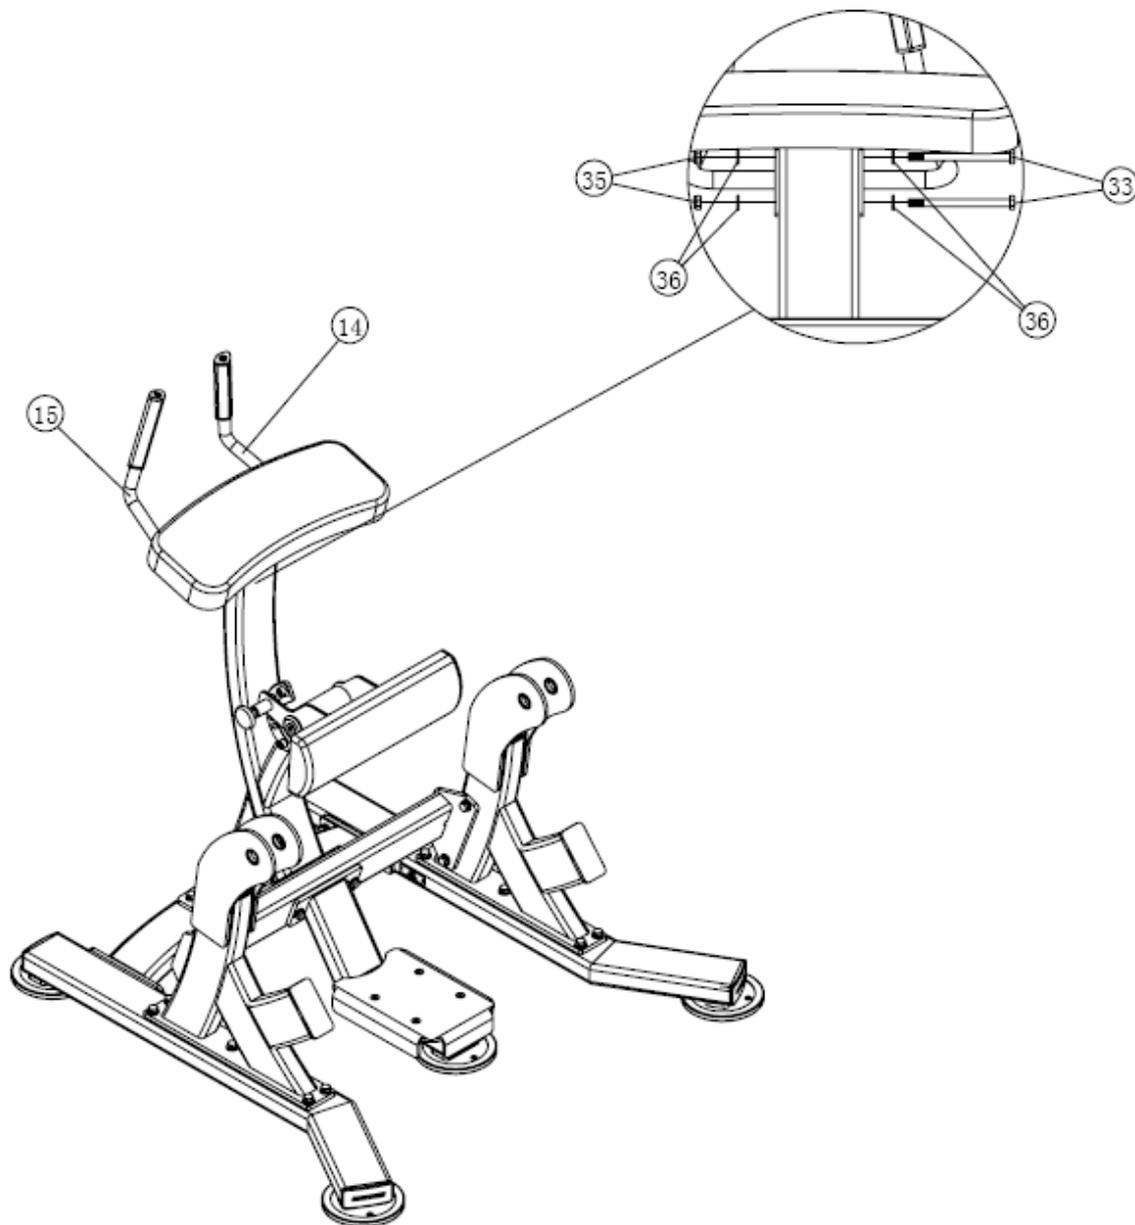


Step 9

1. Attach Right Arm Frame (#6), Bearing Rotating Shaft B (#22) and 2×Decorative CapΦ11×Φ50×8 (#24) to Right Bottom Frame (#2) using Two Flat Head Cap Screw M10X25 (#27)
2. Attach Left Arm Frame (#7), Bearing Rotating Shaft B (#22) and 2×Decorative CapΦ11×Φ50×8 (#24) to Left Bottom Frame (#3) using Two Flat Head Cap Screw M10X25 (#27)

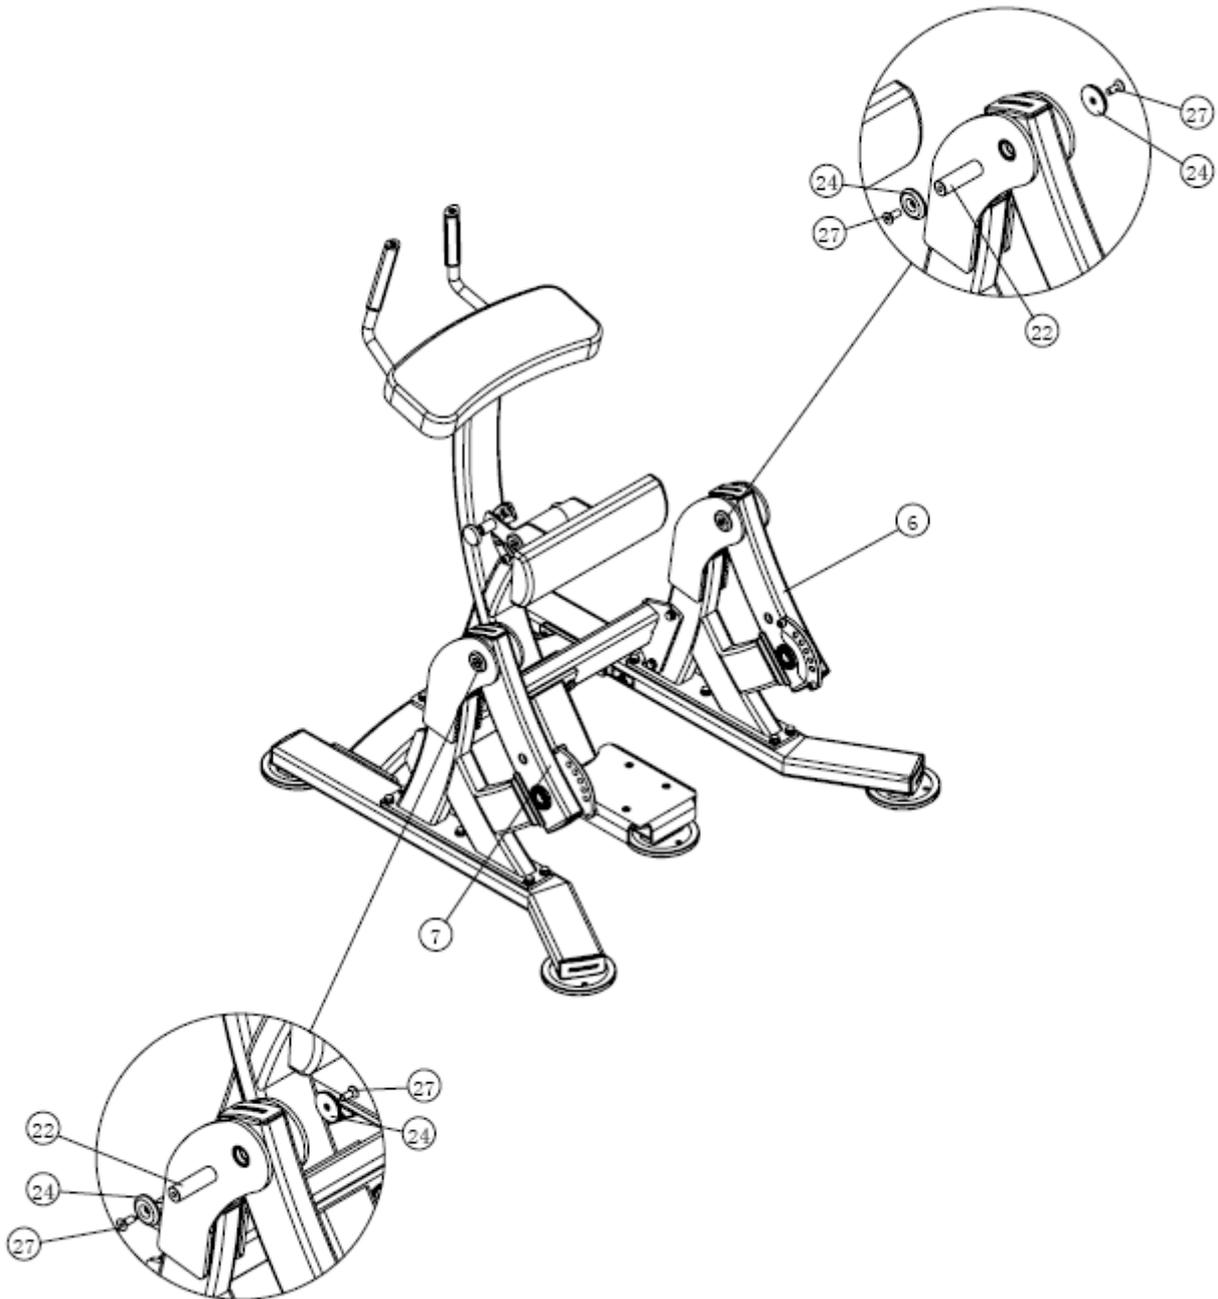


Step 10

1. Attach Longer Barbell Plate Rack (#16), Flat Head Cap Screw M10X25(#27) to Right Arm Frame (#6) using One Decorative CapΦ11×Φ50×8 (#24)
2. Attach Longer Barbell Plate Rack (#16), Flat Head Cap Screw M10X25(#27) to Left Arm Frame (#7) using One Decorative CapΦ11×Φ50×8 (#24)

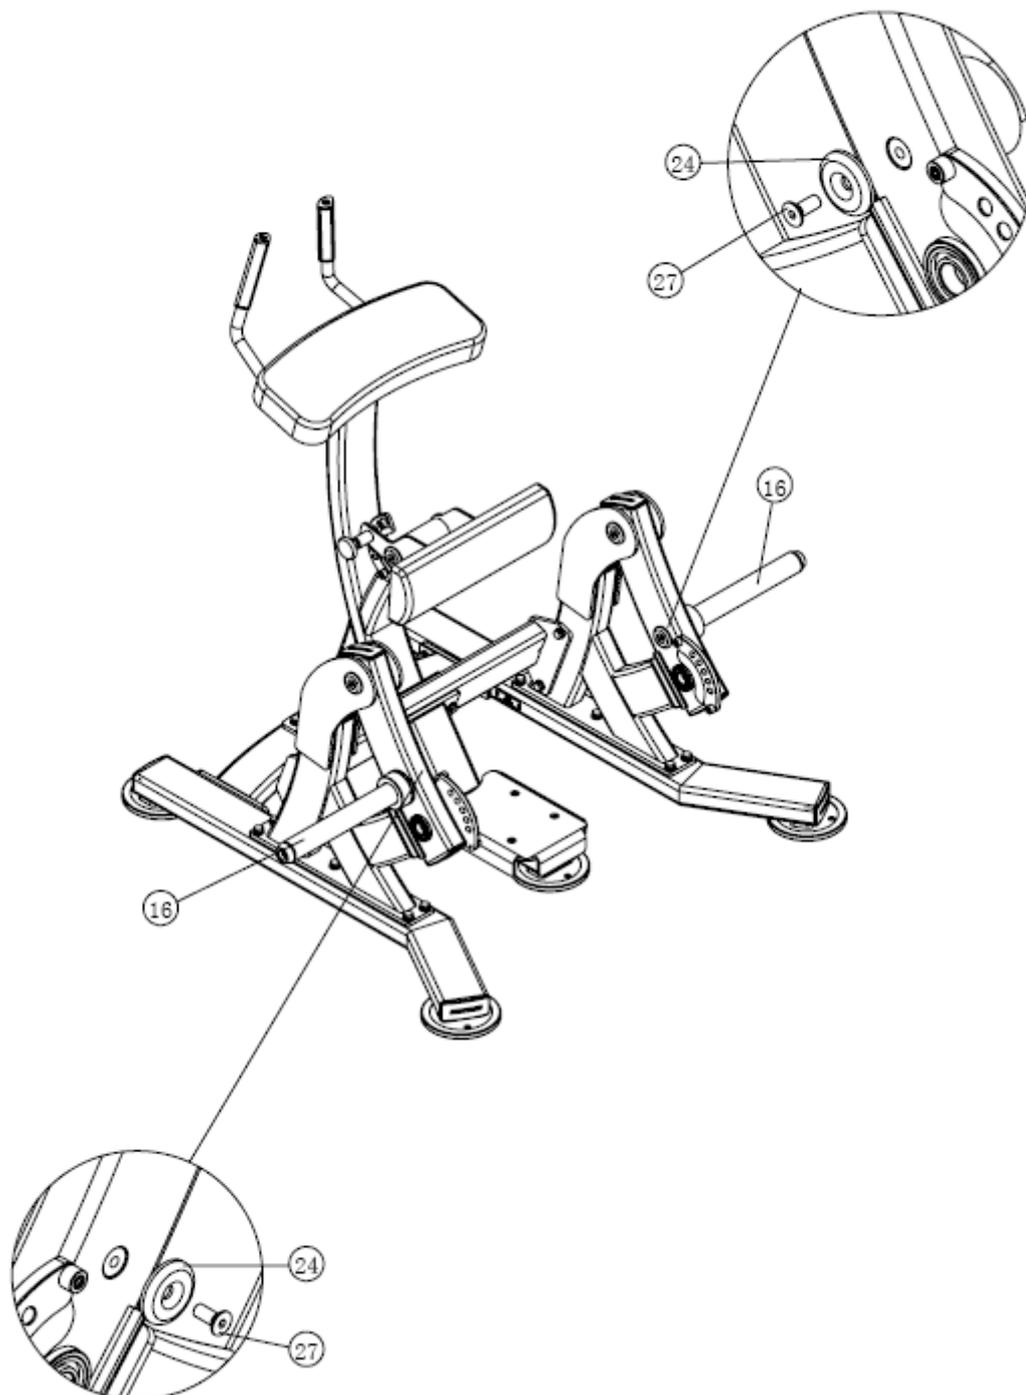

Step 11


1. Attach Right Foam Frame (#12), Small End Cap (#23) to Right Arm Frame (#6) using:
One Flat Head Cap Screw M8X20 (#29)
2. Attach Left Foam Frame (#13), Small End Cap (#23) to Right Arm Frame (#6) using:
One Flat Head Cap Screw M8X20 (#29)

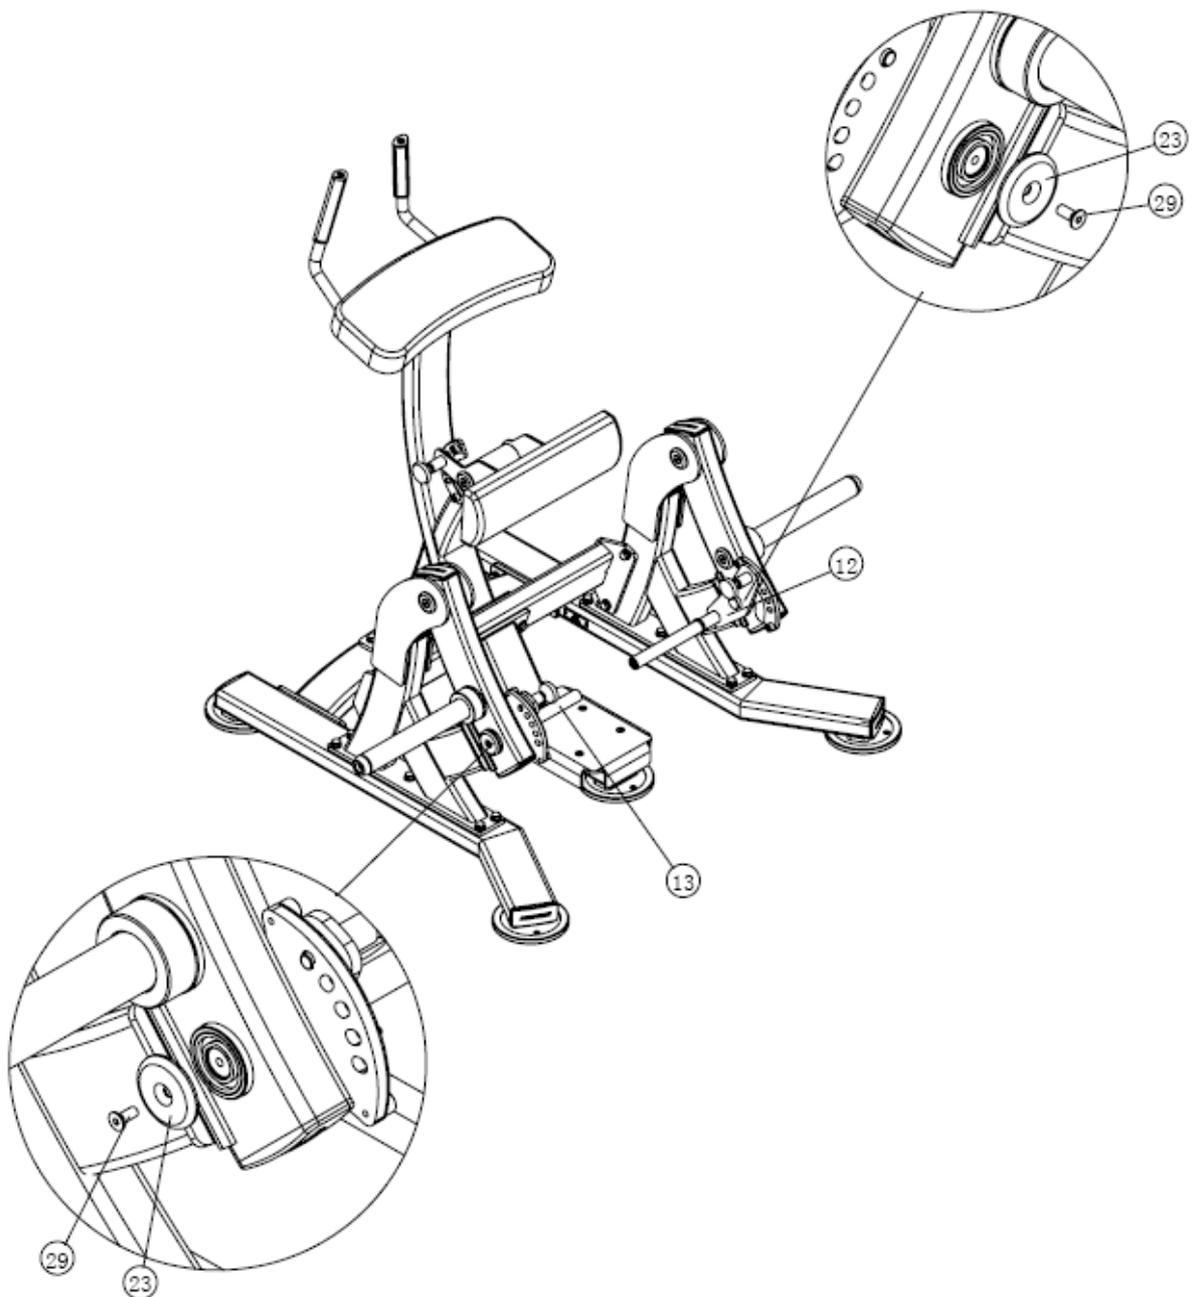

Step 12

1. Attach Knee Foam (#20), Foam Inner Cap (#25), Foam Outer Cap(#26) to Right Foam Frame (#12) using One Flat Head Cap Screw M8X30 (#28)
2. Attach Knee Foam (#20), Foam Inner Cap (#25), Foam Outer Cap(#26) to Left Foam Frame (#13) using One Flat Head Cap Screw M8X30 (#28)

PLEASE MAKE SURE THE BOLTS ARE FASTENED IN GOOD POSITION

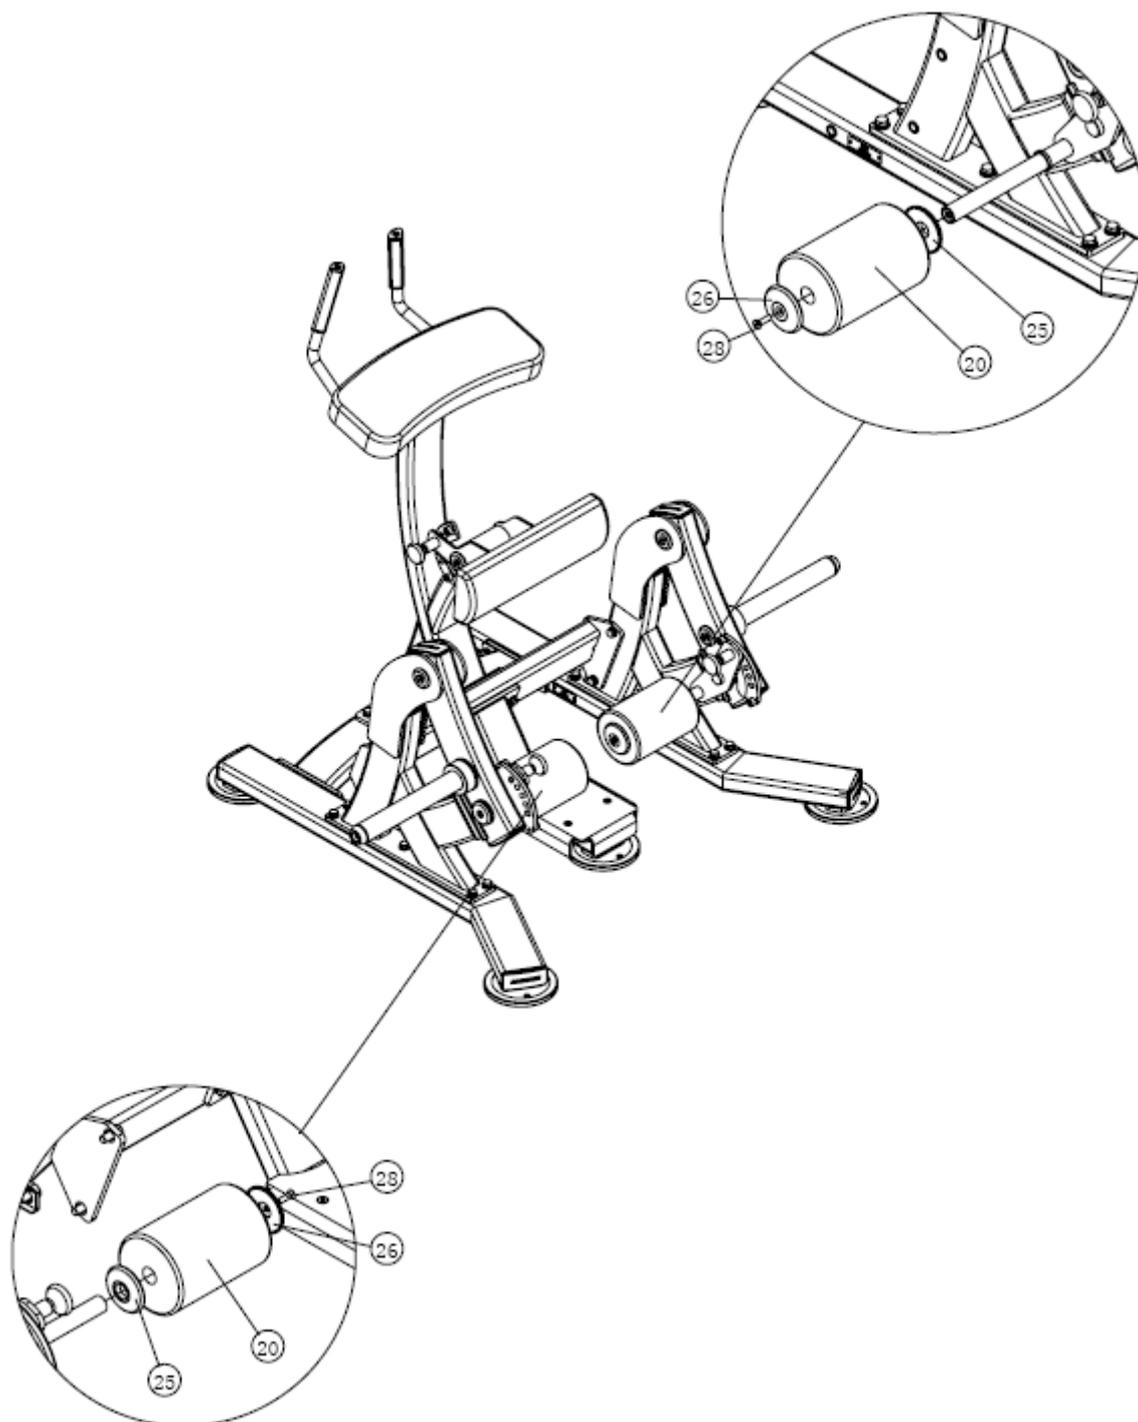

Maintenance Schedule

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY					
Inspect: Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY						
Clean: Upholstery	DAILY	WEEKLY						
Inspect: Cables or Belts and their tension	DAILY	WEEKLY						
Inspect: Accessory Bars, and Handles	WEEKLY	3 MONTHS						
Inspect: All Decals	WEEKLY	3 MONTHS						
Inspect: All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS						
Inspect: Anti-skid Surface	WEEKLY	3 MONTHS						
Clean&Lubricate: Guide rods with a Teflon(PTFE) based lubricant(Superlube)	MONTHS	3 MONTHS						
Lubricate: Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHS	3 MONTHS						
Clean and Wax: All Glossy Finishes	6 MONTHS	YEARLY						
Repack with Grease: Linear Bearings	6 MONTHS	YEARLY						
Replace: Cables, Belts and Connecting Parts	YEARLY	3 YEARS						

General Maintenance Information

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- *Check all pieces for signs of visible wear or damage.
- *Check springs in snap hooks and pull-pins for proper tension and alignment.
- *If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- *To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- *Periodically take the time to use a mild soap or approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- *Replace ripped or worn upholstery immediately.
- *Keep sharp or pointed objects clear of all upholstery.

Decals:

- *Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- *Inspect all nuts and bolts for any loosening and tighten if needed.
- *Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

- *These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- *We use only high quality belt, and mil-spec cables.
- *Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- *While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- *Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tensions:

- *Referring to the Owner's Manual, when belts or cables are used check all bolts attachment to be sure they are properly attached.
- *Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- *Wipe down adjusting tubes with a dust free rag before applying lubricant.
- *Lubricate seat sleeves and Guide Rods with silicon or Teflon based lubricant spray.

Linear Bearings:

- *Referring to the owner's manual carefully disassembly the bearing from its housing and place a

finger full of light grease (lithium, super lube, etc) into the inside of the bearing. Use your finger, press the grease into the ball-bearings and their tracks. Repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

Weight Training Tips

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.

Specifications

Class: S

Maximum Load of Trainer: 150Kgs/330Lbs



BODYTONE

www.bodytone.eu