

BODYTONE

FORZABOLD
FB40

ABDOMINAL



OWNER'S MANUAL

!CAUTION!

Read all precautions and instructions in this manual before using this equipment.

Table Of Contents

CAUTION!

Read all precautions and instructions in this manual before using this equipment.

| | |
|--|----|
| Important Safety Instructions----- | 3 |
| Instructions----- | 5 |
| Exploded View and Parts List----- | 6 |
| Measurement Guide----- | 14 |
| Assembly Instructions----- | 15 |
| Assembly----- | 16 |
| Adjust Instructions and Exercise Instructions----- | 26 |
| Maintenance Schedule----- | 27 |
| General Maintenance Information----- | 28 |
| Weight Training Tips----- | 29 |

Please assemble according to the actual **Weights** you buy !

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

1. Read all instructions before using the equipment.
These instructions are written to ensure your safety and to protect the unit.
2. Use the equipment only for its intended purpose as described in this guide.
Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
3. The product should only be used on a level surface and is with 0.6 meters space around the product.
Do not use the equipment outdoors.
4. Do not allow children on or near the equipment. And children are not allowed to use this equipment.
Teenagers should use this equipment with adult supervision.
5. Do not overexert yourself or work to exhaustion.
Do not attempt to lift more weight than you can control safely.
If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
6. This equipment is not used as medical apparatus and instruments.
7. Never operate the unit when it has been dropped or damaged.
Never drop or insert anything into any opening in the equipment.
Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.
Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear.
Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
8. Be careful when getting on or off the equipment.
9. Wear proper exercise clothing and shoes for your workout, no loose clothing.


Important Safety Instructions

Personal Safety During Assembly

Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.

Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

Training Area and Free Area

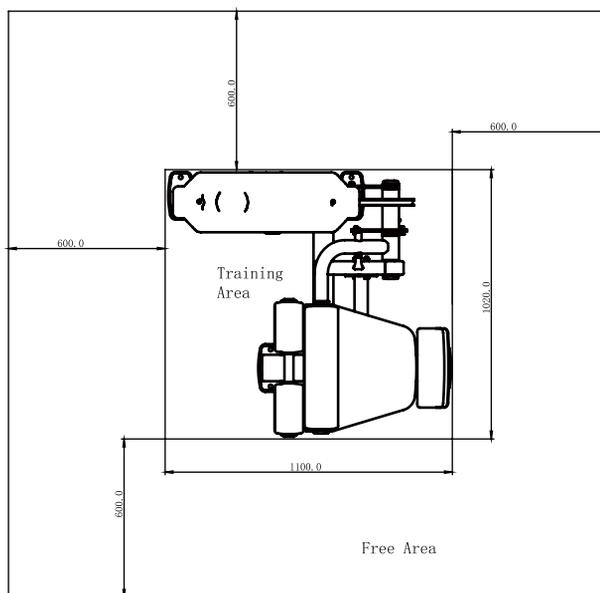

Specifications

Class: S

Maximum Wt. Capacity: 134kg/ 295lbs

Maximum User Weight: 150kg/ 330lbs

Product Dimension: 1085*1003*1504mm

Product Total Surface: 1100*1020mm


Product Total Mass:

Instructions


Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.


Tools Required

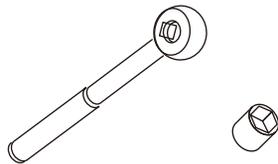


Ratchet Wrench and Socket

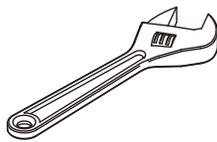


Adjustable Wrench

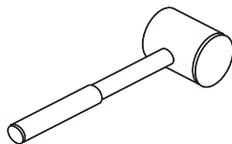

Rubber Mallet

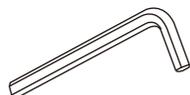

Hex Key Wrench Set

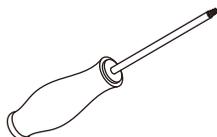

Phillips Screwdriver

Exploded View and Parts List

Overall

| Item No. | Grade No. | Part No. | Description | QTY |
|----------|-----------|------------------|--|-----|
| 1 | 1 | FB4001ASSY | Weight Stack Frame ASSY | 1 |
| 2 | 2 | IT95014200 | Top Plate | 1 |
| 3 | 3 | IT95081700 | Guide Rod $\Phi 19*1242$ | 2 |
| 4 | 4 | IF9301B21ASSY | Front Bracket ASSY | 1 |
| 5 | 5 | FB013100 | Top Cover | 1 |
| 6 | 6 | FB013400 | Spout Plug | 1 |
| 7 | 7 | FB0135ASSY | Left Bracket ASSY | 1 |
| 8 | 8 | FB0136ASSY | Right Bracket ASSY | 1 |
| 9 | 9 | FB0137ASSY | Bottom Bracket ASSY | 1 |
| 10 | 10 | IF931402ASSY | Seat Pad Frame ASSY | 1 |
| 11 | 11 | IF931403ASSY | Support Frame ASSY | 1 |
| 12 | 12 | IF931404ASSY | Cam Wheel Brackets ASSY | 1 |
| 13 | 13 | IF931405FBASSY | Pivot Arm ASSY | 1 |
| 14 | 14 | IF93140600 | Connection Frame | 1 |
| 15 | 15 | IF931407ASSY | FOAM Tube ASSY | 1 |
| 16 | 16 | IF93050900 | Rotate Support Frame ASSY | 1 |
| 17 | 17 | IT80053700 | Locking Ring | 2 |
| 18 | 18 | SG500110400V5 | 4.5" Pulley | 2 |
| 19 | 19 | IF93145600 | Cable ASSY | 1 |
| 20 | 20 | IT90012000V1 | Selector Pin W/Coil | 1 |
| 21 | 21 | IT80023000 | Weight Rubber Bumper | 2 |
| 22 | 22 | IT95016100 | Guide Rod Fixing Sleeve $\Phi 25*\Phi 19*45$ | 2 |
| 23 | 23 | HFOPT900-04A0602 | Spring $\Phi 15.5*\Phi 1.5*36$ | 2 |
| 24 | 24 | IT80124103 | Split Pin $\Phi 11*76$ | 1 |
| 25 | 25 | FE97211900 | Cap $\Phi 60$ | 2 |
| 26 | 26 | FE97212000 | Circle Ring $\Phi 62.5*5$ | 1 |
| 27 | 27 | HFOPT900-04A1400 | Aluminium Sheath | 1 |
| 28 | 28 | V22500 | Plug | 1 |


Exploded View and Parts List

Overall

| Item No. | Grade No. | Part No. | Description | QTY |
|----------|-----------|-------------------|--|-----|
| 29 | 29 | IF93062200 | WasherΦ62*Φ10.5*3 | 1 |
| 30 | 30 | IT80011800DS | Adjustable Ring | 1 |
| 31 | 31 | HF1652100 | Plastic Washer | 4 |
| 32 | 32 | IF81022000PBC | Foam Cap | 2 |
| 33 | 33 | GB5780M10*120DS20 | Hex Head Bolt M10*120 | 4 |
| 34 | 34 | GB5780M10*80DS20 | Hex Head Bolt M10*80 | 3 |
| 35 | 35 | GB5780M10*75DS20 | Hex Head Bolt M10*75 | 6 |
| 36 | 36 | GB5780M10*50DS20 | Hex Head Bolt M10*50 | 2 |
| 37 | 37 | GB5780M10*30DS20 | Hex Head Bolt M10*30 | 5 |
| 38 | 38 | GB70M10*25DS20NL | Socket Head Cap Screw M10*25 | 2 |
| 39 | 39 | PNLM10*35*35DS2NL | Button Head Cap Screw M10*35*35 | 2 |
| 40 | 40 | GB77M8*6DS2 | Socket Set Screw M8*6 | 2 |
| 41 | 41 | GB818M6*20DHS2 | Cross Recessed Pan Head Screw M6*20 | 12 |
| 42 | 42 | GB9074ST4.2*16DHS | Cross Disc Self Tapping Screw ST4.2*16 | 12 |
| 43 | 43 | GB9310DS12 | Spring Washer Φ10 | 3 |
| 44 | 44 | NM10DS2 | Nylon Lock Nut M10 | 12 |
| 45 | 45 | GB9510DS2 | Flat Washer Φ11*Φ20*2 | 34 |
| 46 | 46 | FB403200 | Front Shroud | 1 |
| 47 | 47 | FB013300 | Rear Shroud | 1 |
| 48 | 48 | IF81241100V3 | FOAM ASSY | 1 |
| 49 | 49 | IT95322000V1 | Waist Pad | 1 |
| 50 | 50 | IF93145200 | Seat Pad | 1 |
| 51 | 51 | IF81023500V4 | FOAM ASSY | 2 |
| 52 | | NBS8DHS | Hex Key S=8 | 1 |
| 53 | | NBS6DHS | Hex Key S=6 | 1 |
| 54 | | NBS4DHS | Hex Key S=4 | 1 |
| 55 | | LW200BS | Wrench Φ6*117 | 1 |
| 56 | | YHY | Lube | 1 |


Exploded View and Parts List

Overall

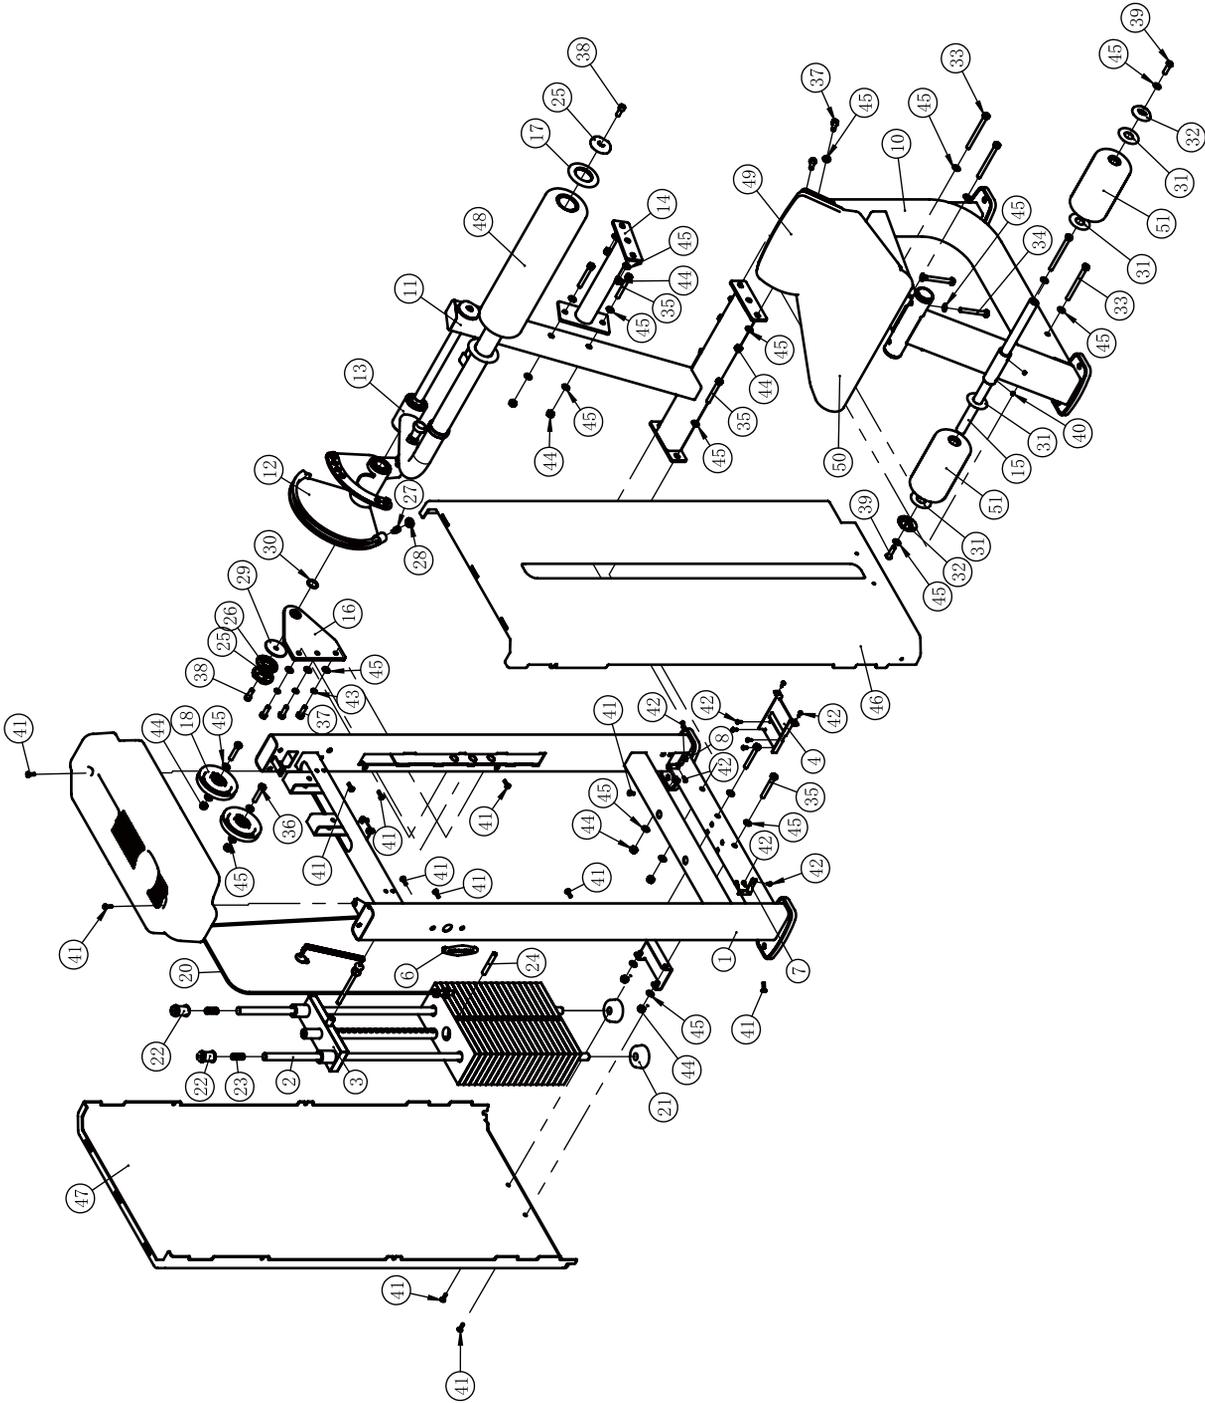

Exploded View and Parts List

Weight Stack Frame ASSY

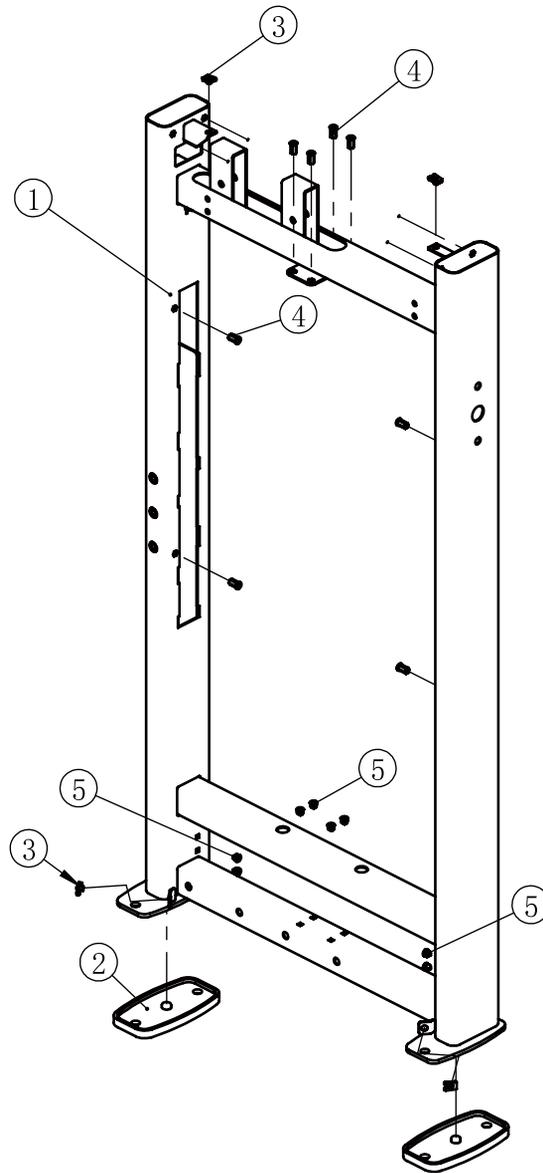


| Item No. | Grade No. | Part No. | Description | QTY |
|----------|-----------|----------------------|--------------------|-----|
| 1 | 1.1 | IF9314ZN0100 | Weight Stack Frame | 1 |
| 2 | 1.2 | BS81223100 | Foot Plate | 2 |
| 3 | 1.3 | GB17880.5M6*16.5DS17 | Rivet Nut M6 | 10 |
| 4 | 1.4 | AC32705800 | U-nut M6 | 4 |
| 5 | 1.5 | ECU7P3500 | Plastic Nut | 8 |

Exploded View and Parts List


Left Bracket ASSY

7

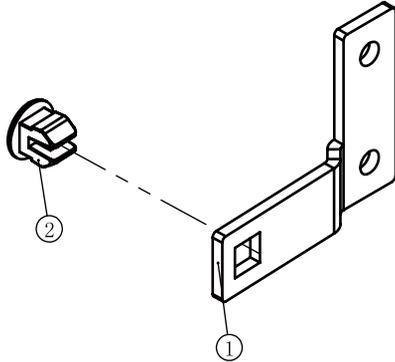


Right Bracket ASSY

8

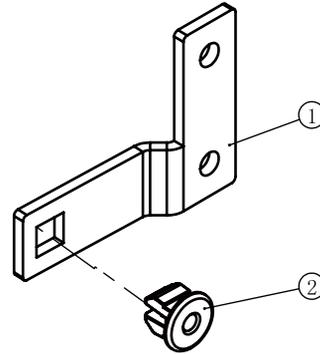


Bottom Bracket ASSY

9

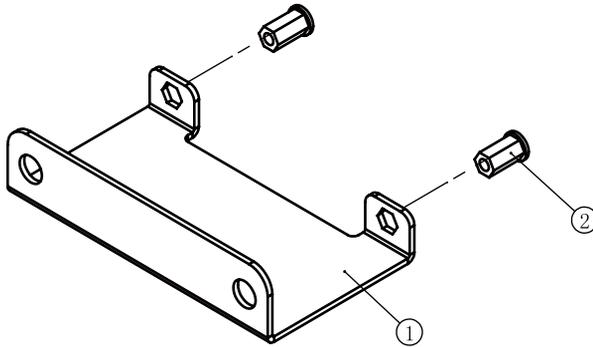

Front Bracket ASSY

4

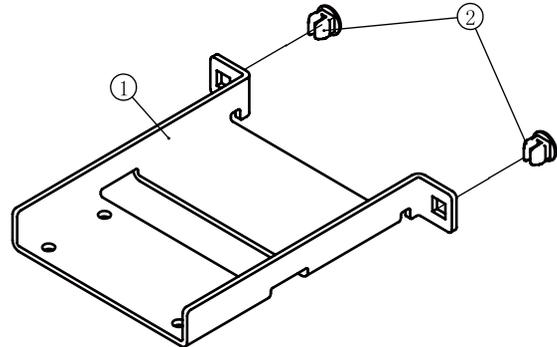

| Item No. | Grade No. | Part No. | Description | QTY |
|----------|-----------|-----------|--------------|-----|
| 1 | 7.1 | FB013500 | Left Bracket | 1 |
| 2 | 7.2 | ECU7P3500 | Plastic Nut | 1 |


| Item No. | Grade No. | Part No. | Description | QTY |
|----------|-----------|-----------|---------------|-----|
| 1 | 8.1 | FB013600 | Right Bracket | 1 |
| 2 | 8.2 | ECU7P3500 | Plastic Nut | 1 |

| Item No. | Grade No. | Part No. | Description | QTY |
|----------|-----------|----------------------|----------------|-----|
| 1 | 9.1 | FB013700 | Bottom Bracket | 1 |
| 2 | 9.2 | GB17880.5M6*16.5DS17 | Rivet Nut M6 | 2 |


| Item No. | Grade No. | Part No. | Description | QTY |
|----------|-----------|--------------|---------------|-----|
| 1 | 4.1 | IF9301B21.00 | Front Bracket | 1 |
| 2 | 4.2 | ECU7P3500 | Plastic Nut | 2 |

Exploded View and Parts List

Seat Pad Frame ASSY

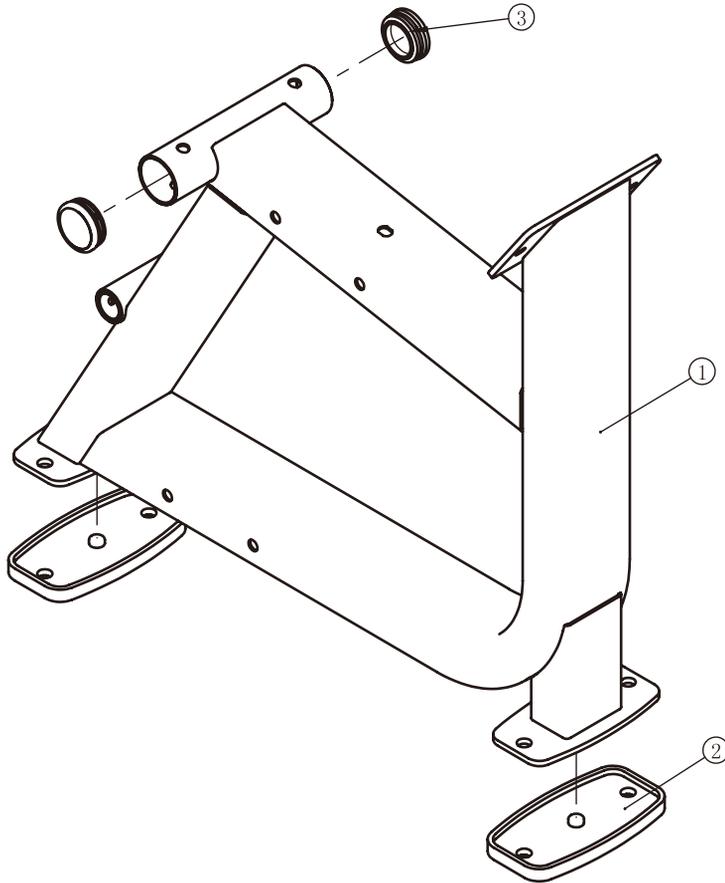

Support Frame ASSY

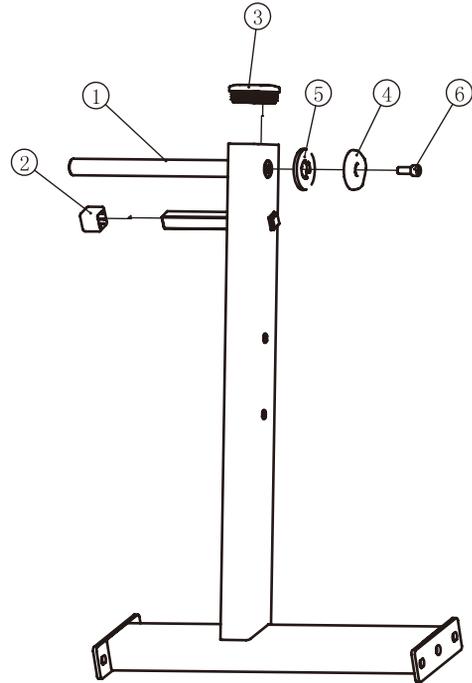


| Item No. | Grade No. | Part No. | Description | QTY |
|----------|-----------|------------|----------------|-----|
| 1 | 10.1 | IF93140200 | Seat Pad Frame | 1 |
| 2 | 10.2 | BS81223100 | Foot Plate | 2 |
| 3 | 10.3 | B10009900 | Plug | 2 |

| Item No. | Grade No. | Part No. | Description | QTY |
|----------|-----------|------------------|----------------------------------|-----|
| 1 | 11.1 | IF93140300 | Support Frame | 1 |
| 2 | 11.2 | FE97213100 | Square Rubber Sleeve | 1 |
| 3 | 11.3 | KPSFID2800 | Plug | 1 |
| 4 | 11.4 | FE97211900 | Cap $\Phi 60$ | 1 |
| 5 | 11.5 | FE97212000 | Circle Ring $\Phi 62.5 \times 5$ | 1 |
| 6 | 11.6 | GB70M10*25DS20NL | Socket Head Cap Screw M10*25 | 1 |

Exploded View and Parts List

Cam Wheel Brackets ASSY


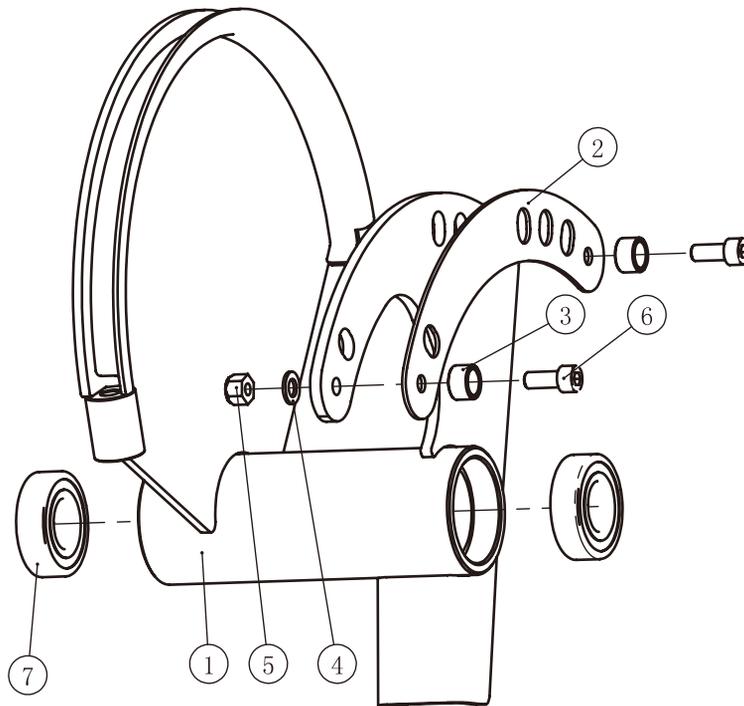


| Item No. | Grade No. | Part No. | Description | QTY |
|----------|-----------|----------------|---|-----|
| 1 | 12.1 | IF93140400 | Cam Wheel Brackets | 1 |
| 2 | 12.2 | IF93142100 | Lining Board | 1 |
| 3 | 12.3 | IN-S10111200 | Rubber Sleeve $\Phi 17*10.5$ | 2 |
| 4 | 12.4 | GB958DS2 | Flat Washer $\Phi 9*\Phi 16*1.6$ | 2 |
| 5 | 12.5 | NM8DS2 | Nylon Lock Nut M8 | 2 |
| 6 | 12.6 | GB70M8*20DS20 | Socket Head Cap Screw M8*20 | 2 |
| 7 | 12.7 | GB2766205-2ZC3 | Deep Groove Ball Bearing $\Phi 25*\Phi 52*15$ | 2 |

Exploded View and Parts List

Pivot Arm ASSY


Foam Tube ASSY

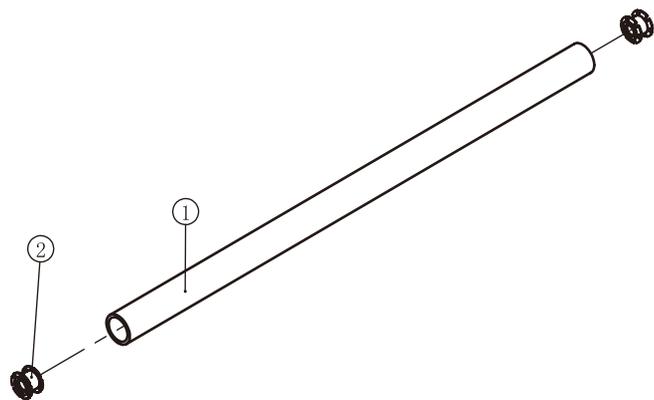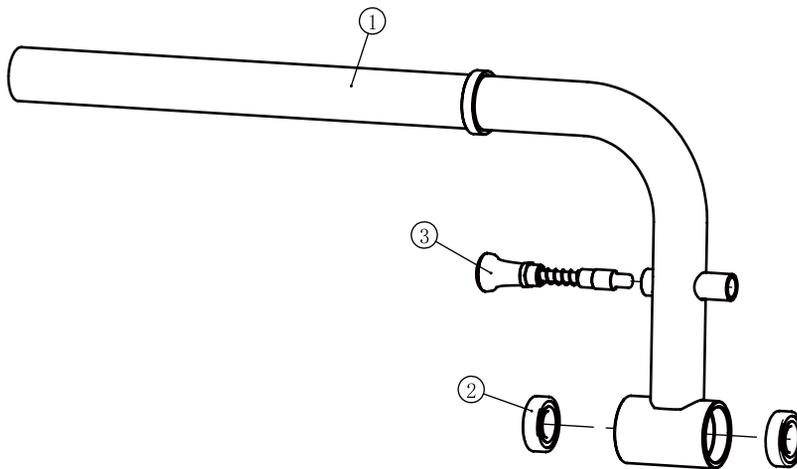

| Item No. | Grade No. | Part No. | Description | QTY |
|----------|-----------|-----------------|---|-----|
| 1 | 13.1 | IF93140500 | Pivot Arm | 1 |
| 2 | 13.2 | GB2766205-2ZC3 | Deep Groove Ball Bearing $\Phi 25*\Phi 52*15$ | 2 |
| 3 | 13.3 | IT95151500P201C | Pin | 1 |

| Item No. | Grade No. | Part No. | Description | QTY |
|----------|-----------|------------|---------------|-----|
| 1 | 15.1 | IF93140701 | Startup Frame | 1 |
| 2 | 15.2 | IF81165000 | Lock Nut | 2 |

Measurement Guide

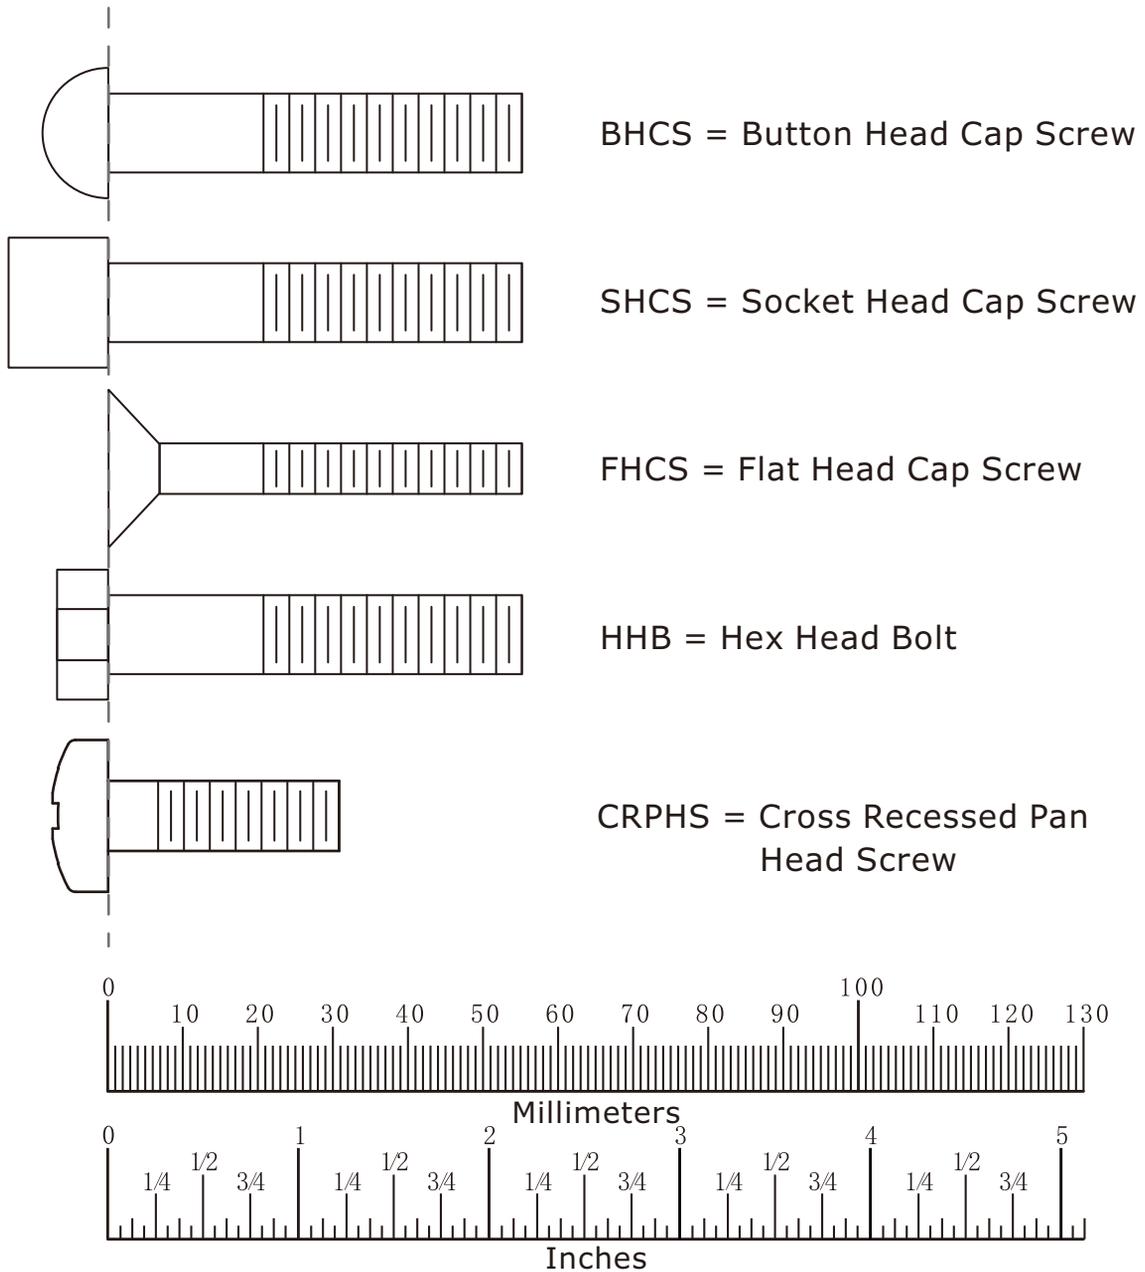

| | | | | | |
|-----------------------------------|---------------------------|---------------------------------------|--------------------------------|--|-------------------|
| Diameter of bolt (mm/inch) | M6(1/4") | M8(5/16") | M10(3/8") | M12(1/2") | M16(5/8") |
| Tightening torque (N.m) | 9~12 | 22~30 | 45~59 | 78~104 | 193~257 |
| Operational methods for adult men | The strength of the wrist | The strength of the wrist and forearm | The strength of the entire arm | The strength of the arm and upper body | with all strength |

Assembly Instructions

Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.

NOTE

As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

Assembly

STEP 3

Here is the assembly instruction for **160LBS Weights !**

1. Attach:

two Guide Rod $\Phi 19 \times 1242$ (#2)

two Weight Rubber Bumper (#21)

fifteen Weight Plate 10LBS (#101)

two weight stack space (#103)

one Top Plate (#3)

to the Weight Stack Frame ASSY (#1) using:

two Guide Rod Fixing Sleeve $\Phi 25 \times \Phi 19 \times 45$ (#22)


two Spring (#23)

2. Attach the Selector Pin W/Coil (#20) to the Top Plate (#9).

3. Attach the First Weight Plate 10LBS (#101) to the Top Plate (#3) using:

one Spring Pin $\Phi 11 \times 76$ (#24)

| Grade No. | Part No. | Description | QTY |
|-----------|------------|--------------------|-----|
| 101 | FE97193100 | 10LBS Weight Plate | 15 |
| 103 | FEWS01ASSY | Weight Stack Space | 2 |

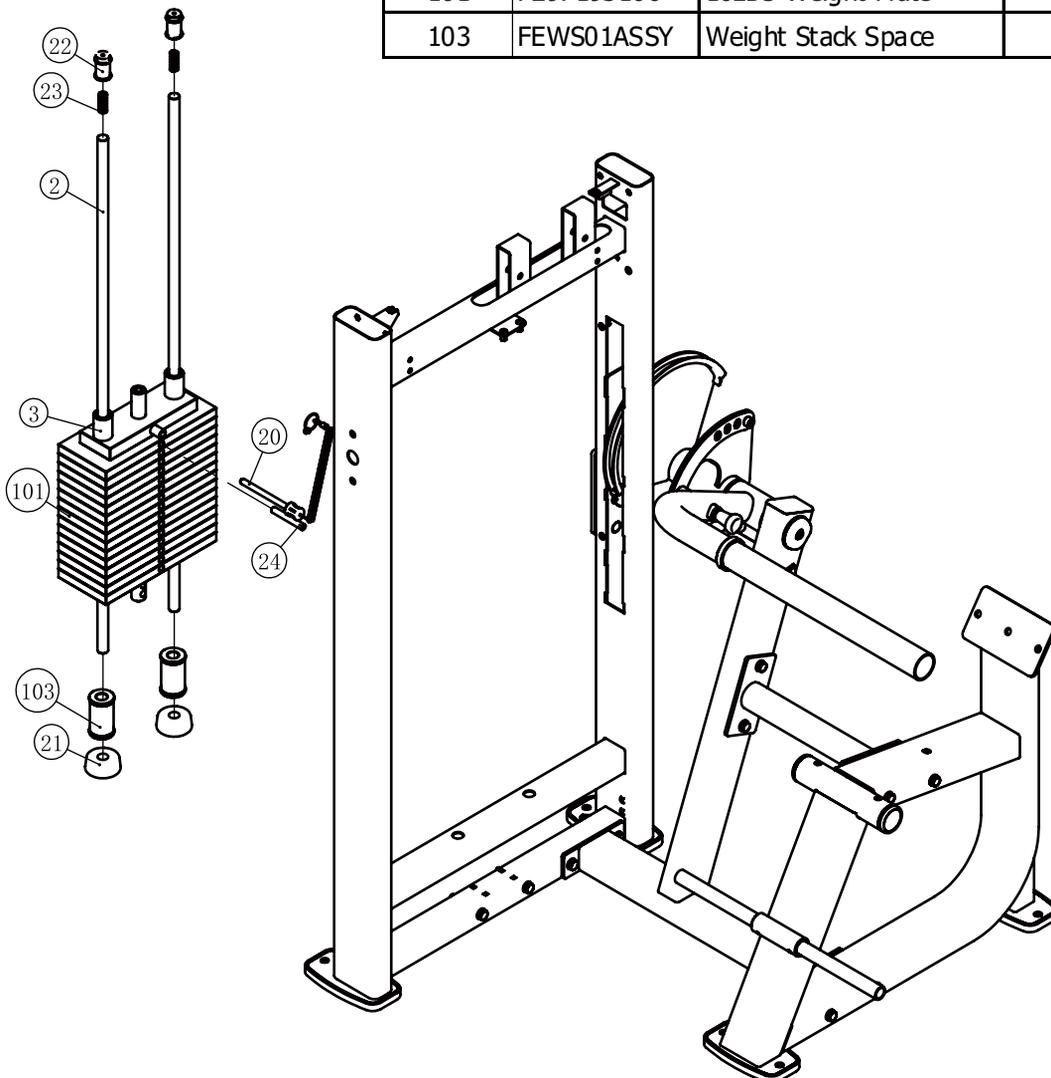

Assembly

STEP 3

Here is the assembly instruction for **200LBS Weights !**

1. Attach:

two Guide Rod $\Phi 19 \times 1242$ (#2)

two Weight Rubber Bumper (#21)

nineteen Weight Plate 10LBS (#101)

one Top Plate (#3)

to the Weight Stack Frame ASSY (#1) using:

two Guide Rod Fixing Sleeve $\Phi 25 \times \Phi 19 \times 45$ (#22)


two Spring (#23)

2. Attach the Selector Pin W/Coil (#20) to the Top Plate (#9).

3. Attach the First Weight Plate 10LBS (#101) to the Top Plate (#3) using:

one Spring Pin $\Phi 11 \times 76$ (#24)

| Grade No. | Part No. | Description | QTY |
|-----------|------------|--------------------|-----|
| 101 | FE97193100 | 10LBS Weight Plate | 19 |

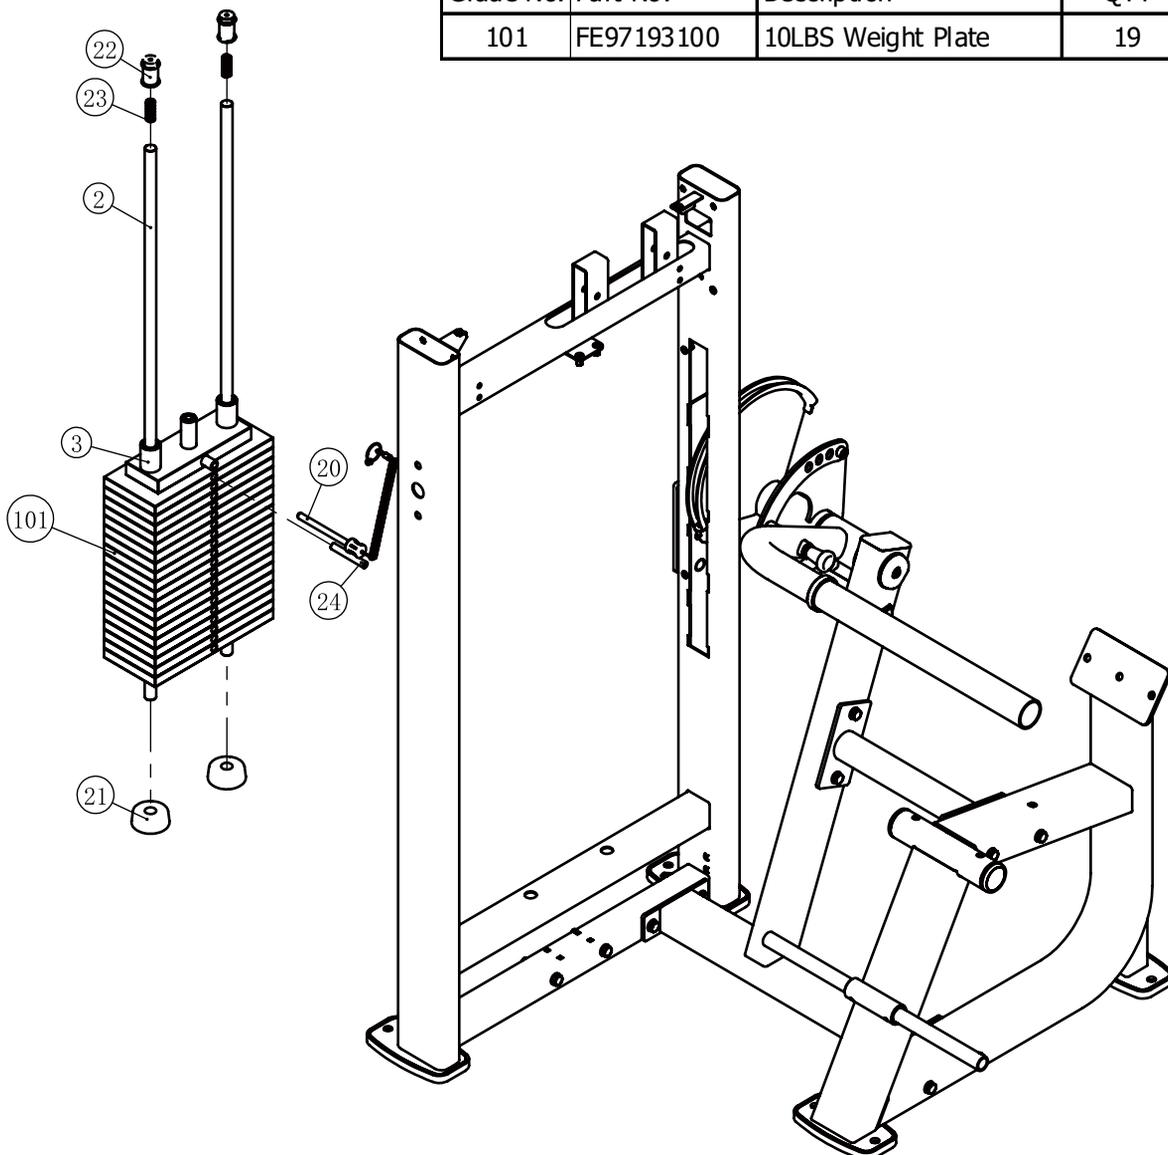

Assembly

STEP 3

Here is the assembly instruction for **235LBS Weights !**

1. Attach:

two Guide Rod $\Phi 19 \times 1242$ (#2)

two Weight Rubber Bumper (#21)

fifteen Weight Plate 15LBS (#102)

two weight stack space (#103)

one Top Plate (#3)

to the Weight Stack Frame ASSY (#1) using:

two Guide Rod Fixing Sleeve $\Phi 25 \times \Phi 19 \times 45$ (#22)


two Spring (#23)

2. Attach the Selector Pin W/Coil (#20) to the Top Plate (#9).

3. Attach the First Weight Plate 15LBS (#102) to the Top Plate (#3) using:

one Spring Pin $\Phi 11 \times 76$ (#24)

| Grade No. | Part No. | Description | QTY |
|-----------|------------|--------------------|-----|
| 102 | FE97193200 | 15LBS Weight Plate | 15 |
| 103 | FEWS01ASSY | Weight Stack Space | 2 |

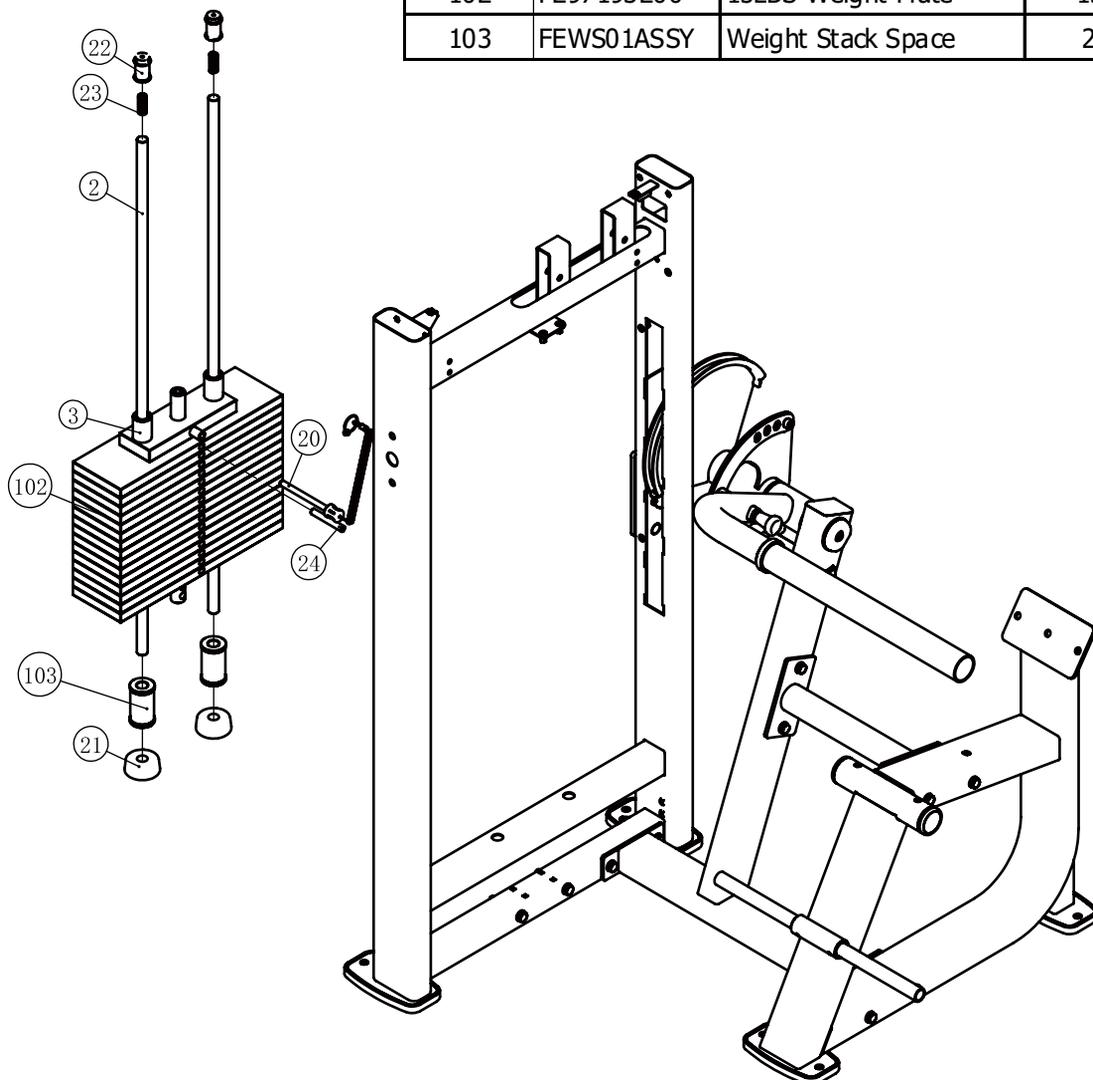

Assembly

STEP 3

Here is the assembly instruction for **295LBS Weights !**

1. Attach:

two Guide Rod $\Phi 19 \times 1242$ (#2)

two Weight Rubber Bumper (#21)

nineteen Weight Plate 15LBS (#102)

one Top Plate (#3)

to the Weight Stack Frame ASSY (#1) using:

two Guide Rod Fixing Sleeve $\Phi 25 \times \Phi 19 \times 45$ (#22)


two Spring (#23)

2. Attach the Selector Pin W/Coil (#20) to the Top Plate (#9).

3. Attach the First Weight Plate 15LBS (#102) to the Top Plate (#3) using:

one Spring Pin $\Phi 11 \times 76$ (#24)



| Grade No. | Part No. | Description | QTY |
|-----------|------------|--------------------|-----|
| 102 | FE97193200 | 15LBS Weight Plate | 19 |

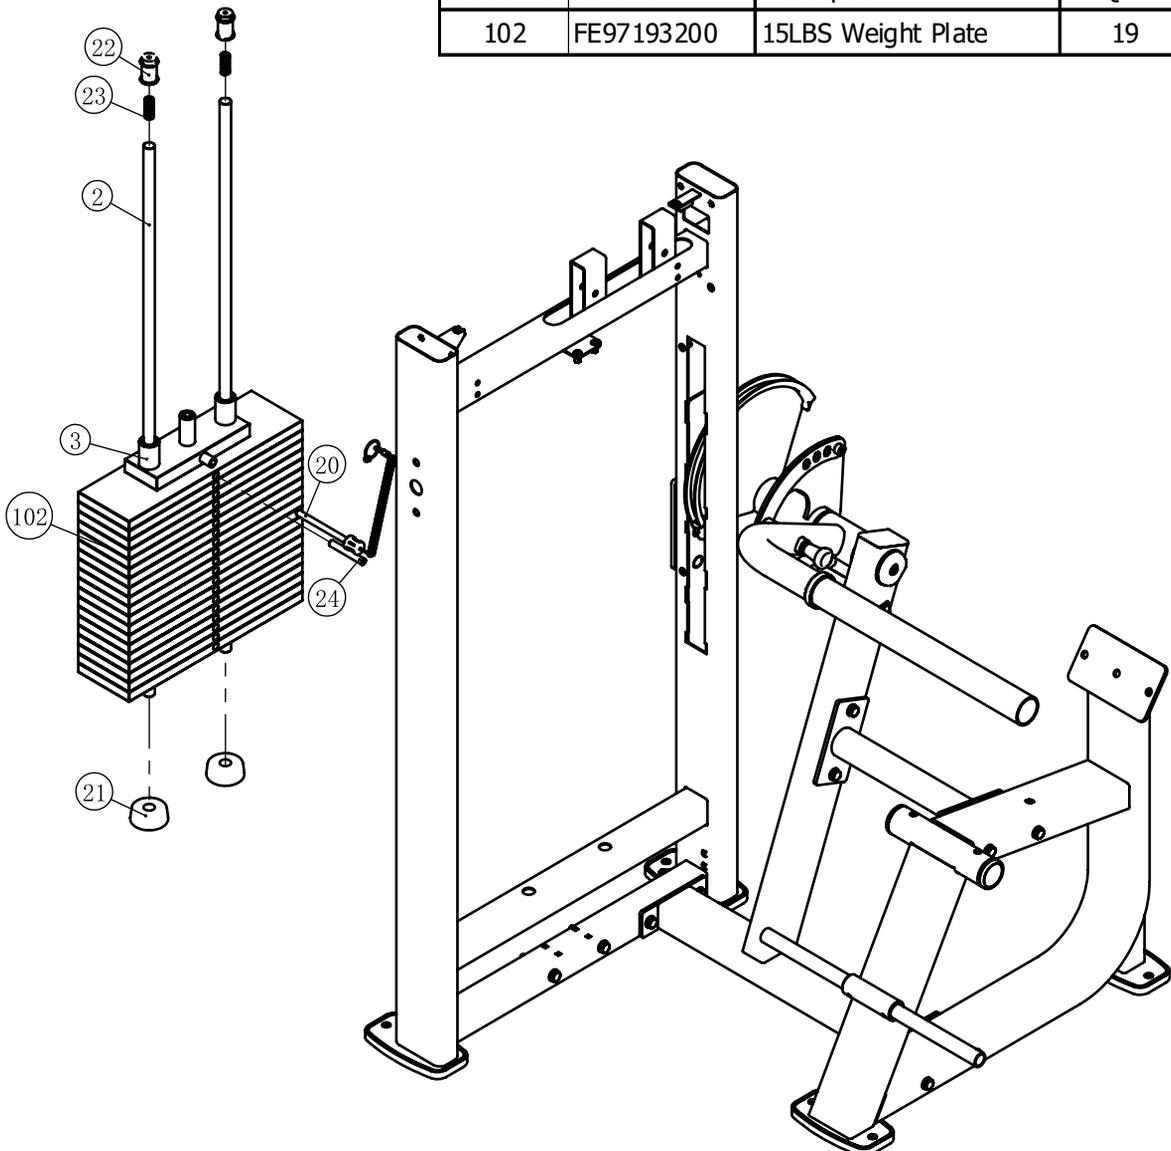



Assembly

All weight plate sticker paste schematic diagram

| | |
|---------|-----|
| LBS 20 | 9 |
| LBS 30 | 14 |
| LBS 40 | 18 |
| LBS 50 | 23 |
| LBS 60 | 27 |
| LBS 70 | 32 |
| LBS 80 | 36 |
| LBS 90 | 41 |
| LBS 100 | 45 |
| LBS 110 | 50 |
| LBS 120 | 54 |
| LBS 130 | 59 |
| LBS 140 | 64 |
| LBS 150 | 68 |
| LBS 160 | 73 |
| LBS 170 | 77 |
| LBS 180 | 82 |
| LBS 190 | 86 |
| LBS 200 | 91 |
| LBS 210 | 95 |
| LBS 220 | 100 |
| LBS 230 | 104 |

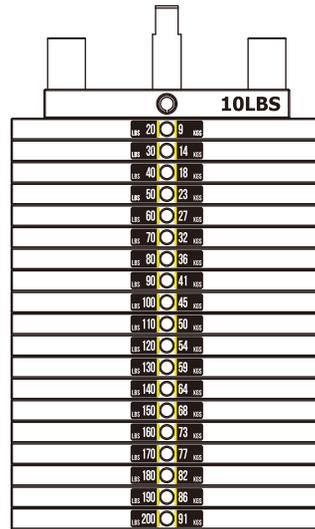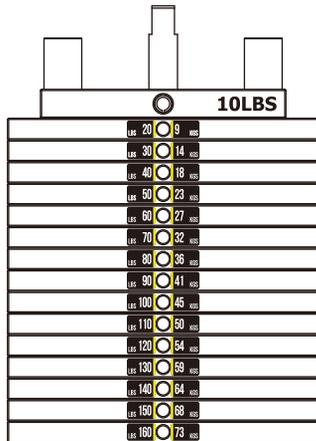


| | |
|---------|-----|
| LBS 25 | 11 |
| LBS 40 | 18 |
| LBS 55 | 25 |
| LBS 70 | 32 |
| LBS 85 | 38 |
| LBS 100 | 45 |
| LBS 115 | 52 |
| LBS 130 | 59 |
| LBS 145 | 66 |
| LBS 160 | 72 |
| LBS 175 | 79 |
| LBS 190 | 86 |
| LBS 205 | 93 |
| LBS 220 | 100 |
| LBS 235 | 107 |
| LBS 250 | 113 |
| LBS 265 | 120 |
| LBS 280 | 127 |
| LBS 295 | 134 |
| LBS 310 | 141 |
| LBS 325 | 147 |

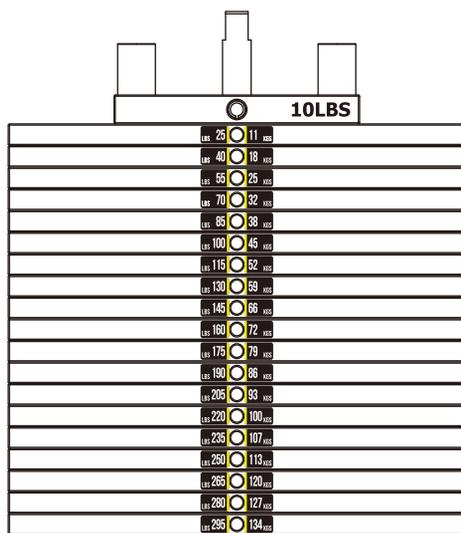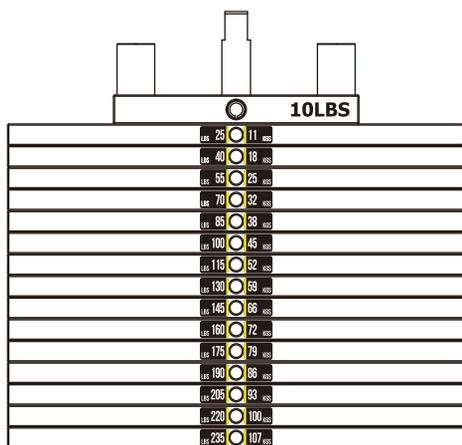

Assembly

STEP 5

1. Attach the Front Bracket ASSY (#4), the Bottom Bracket ASSY (#9), Right Bracket ASSY (#8) and the Left Bracket ASSY (#7) to the Weight Stack Frame ASSY (#1) using:
 - eight ST4.2*16 Cross Disc Self Tapping Screw (#42)
 - two M10*75 HHB (#35)
 - four $\Phi 11*\Phi 20*2$ Flat Washer (#45)
 - two M10 Nylon Lock Nut (#44)
2. Attach the Spout Plug (#6) to the Weight Stack Frame ASSY (#1).
3. Attach the Rear Shroud (#47), the Front Shroud (#46) and the Top Cover (#5) to the Weight Stack Frame ASSY (#1) using:
 - four Cross Disc Self Tapping Screw ST4.2*16 (#42)
 - twelve M6*20 CRPHS (#41)

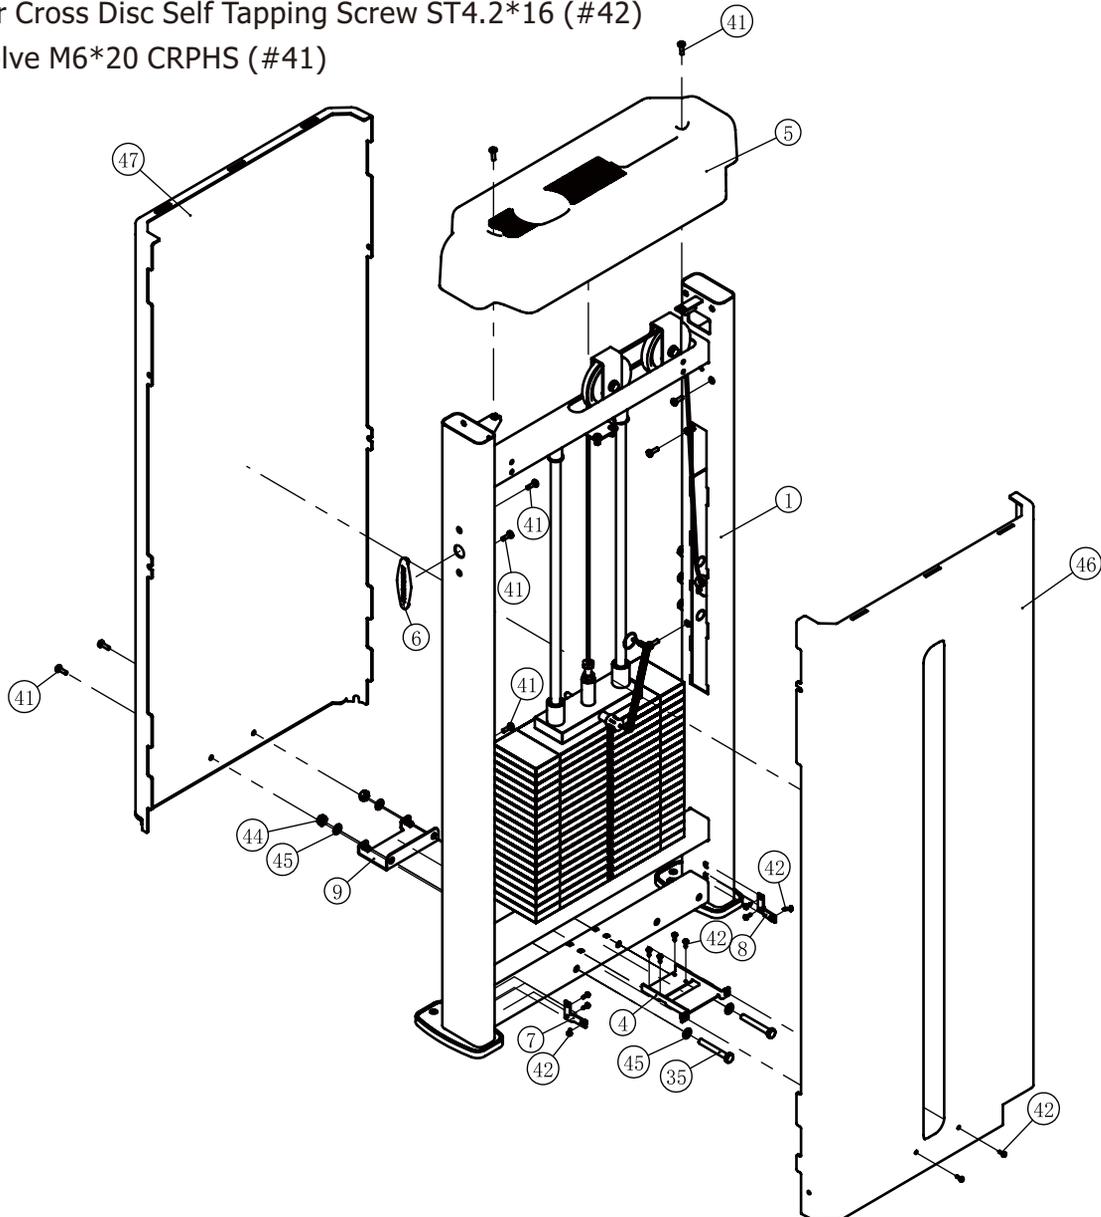



Adjust Instructions and Exercise Instructions

The User Position Adjustment

1. Pull the Adjustable Support and Adjust the Seat Pad to the desired position.
2. Make sure the pin gets into the hole completely.

The use of Selector Pin W/Coil

1. Select an appropriate weight and put the Selector Pin W/Coil into the hole on it.
2. Make sure the Selector Pin W/Coil gets into the hole completely.

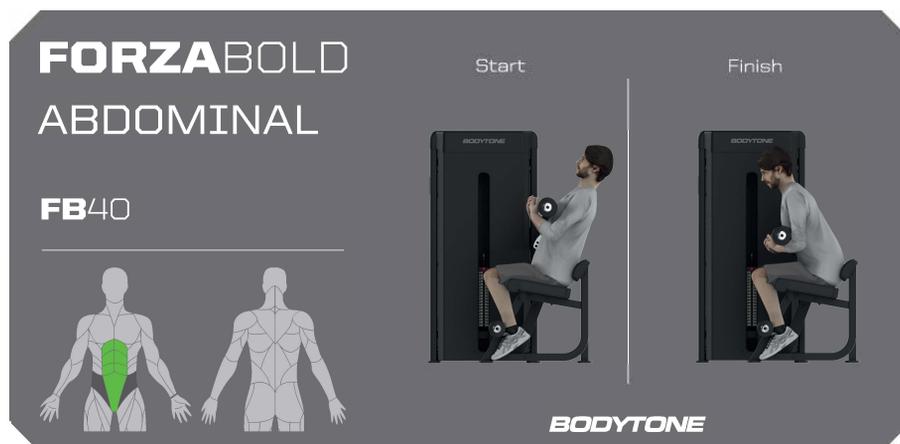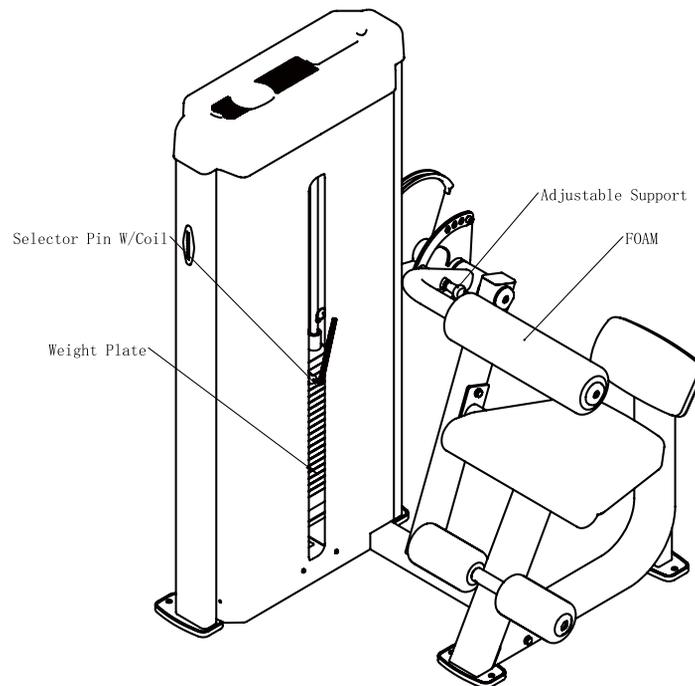

Maintenance Schedule

| ROUTINE | COMMERCIAL MAINTENANCE | HOME MAINTENANCE | LATEST DATE ENTRY | | | | | |
|--|------------------------|------------------|-------------------|--|--|--|--|--|
| | | | | | | | | |
| Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins | DAILY | WEEKLY | | | | | | |
| Clean; Upholstery | DAILY | WEEKLY | | | | | | |
| Inspect; Cables or Belts and their tension | DAILY | WEEKLY | | | | | | |
| Inspect; Accessory Bars, and Handles | WEEKLY | 3 MONTHS | | | | | | |
| Inspect; All Decals | WEEKLY | 3 MONTHS | | | | | | |
| Inspect; All Nuts and Bolts, Tighten if needed | WEEKLY | 3 MONTHS | | | | | | |
| Inspect; Anti-Skid Surface | WEEKLY | 3 MONTHS | | | | | | |
| Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube) | MONTHLY | 3 MONTHS | | | | | | |
| Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing | MONTHLY | 3 MONTHS | | | | | | |
| Clean and Wax; All Glossy Finishes | 6 MONTHS | YEARLY | | | | | | |
| Repack with Grease; Linear Bearings | 6 MONTHS | YEARLY | | | | | | |
| Replace; Cables, Belts and Connecting Parts | YEARLY | 3 YEARS | | | | | | |

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

General Maintenance Information

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- * Check all pieces for signs of visible wear or damage.
- * Check springs in snap hooks and pull-pins for proper tension and alignment.
- * If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- * To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- * Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- * Replace ripped or worn upholstery immediately.
- * Keep sharp or pointed objects clear of all upholstery.

Decals:

- * Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- * Inspect all nuts and bolts for any loosening and tighten if needed.
- * Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

- * These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- * We use only high quality belt, and mil-spec cables.
- * Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- * While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- * Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- * Referring to the Owners Manual, when belts or cables are used check all bolt attachments to be sure they are properly attached.
- * Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- * Wipe down adjusting tubes with a dust free rag before applying lubricant.
- * Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

- * Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. Repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

Weight Training Tips

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.



BODYTONE



bodytone.eu